


User Manual

AGRIMATE[®]
Maximum Power - Super Economy

AMH 200 **4S** **PRO**⁺ Brush Cutter/Power Weeder

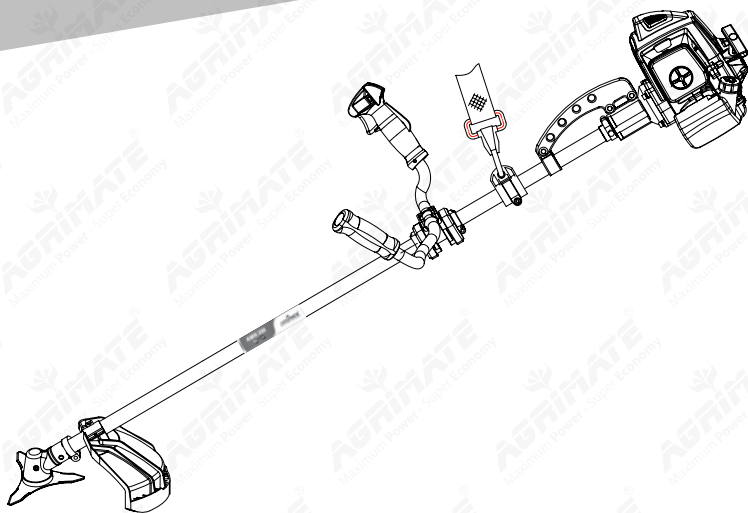




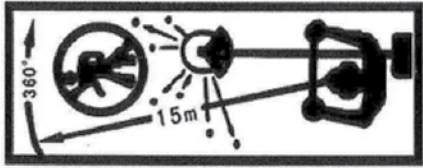
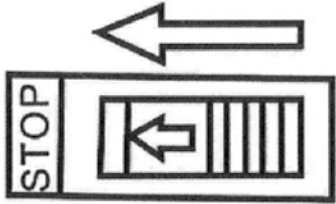
DISCLAIMER: DUE TO CONSTANT UPGRADATION, FEATURES AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE




**BEFORE OPERATING THIS MACHINE,
PLEASE READ THESE INSTRUCTIONS CAREFULLY**

SAFETY OPERATION

DISCRIPTION OF SYMBOLS

	<p>This symbol, the industry's "safety alert symbol", is used throughout this manual & on labels on the machine itself to want of the possibility of personal injury. Read these instructions carefully. It is essential that you read the instructions & safety regulations before you attempt to assemble or use this unit.</p>
	<p>Read the operator's manual carefully.</p>
	<p>Put on goggles, hearing protection & helmet before using.</p>
	<p>Keep people out of the danger zone. this is a circle of 15 meter radius around the unit & operator.</p>
	<p>When transporting, checking or adjusting the unit be sure the engine is stopped.</p>


SPARE PARTS LIST

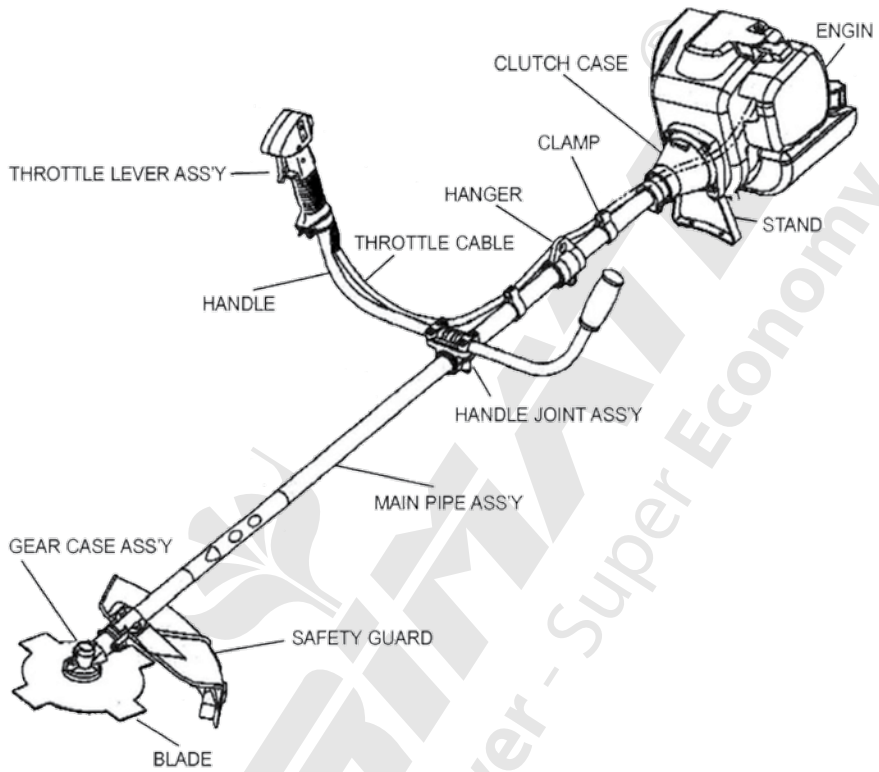

ASSEMBLING


1 assemble engine with main pipe

- Put engine & main pipe under ground then starting assembling
- Lock tight M6 x 30 screw to prevent loosening.

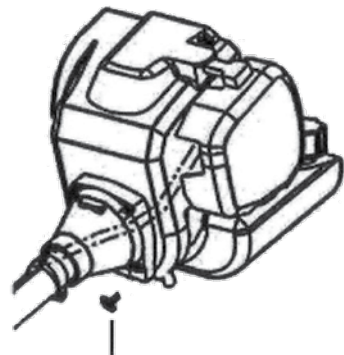


M6 x 30 Screw


ASSEMBLE BLADE & GEAR CASE

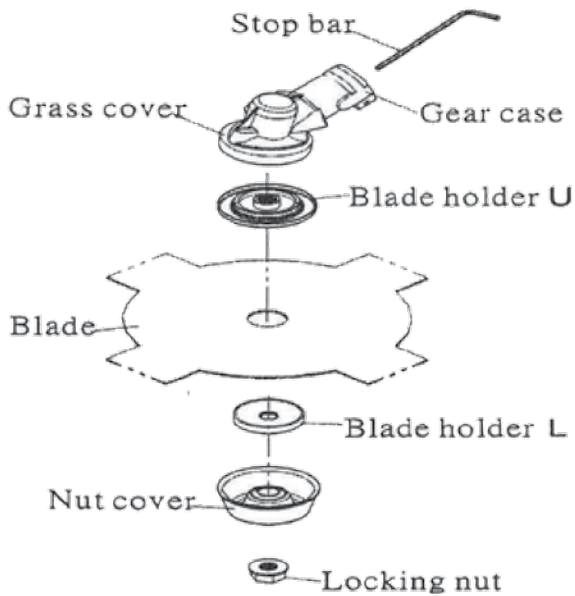

ASSEMBLING BLADE

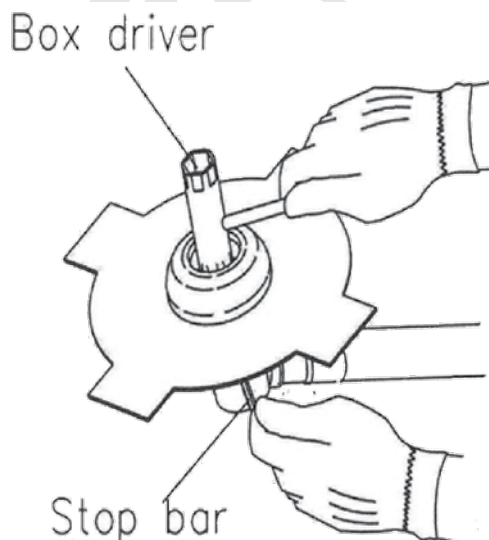


ASSEMBLE SAFETY COVER

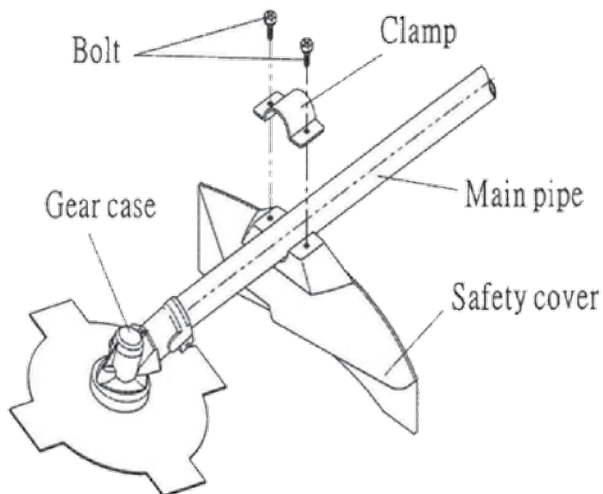


ASSEMBLE HANDLE WITH MAIN PIPE


- Inset right & left handles into Handle joint a evenly.

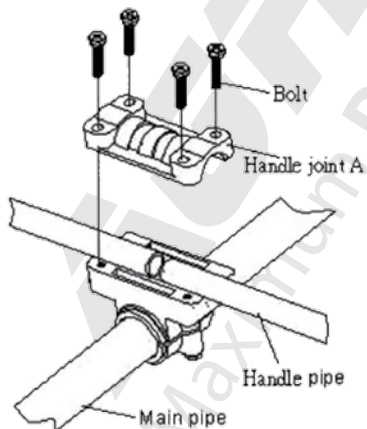

- Adjust handle joint to most comfortable position for user.

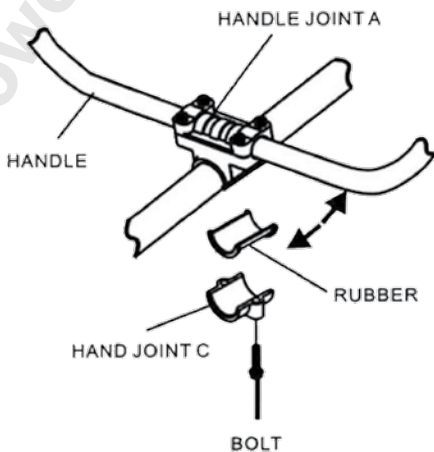

- Adjust handle to suitable angle.
- Lock tight 2 bolt.

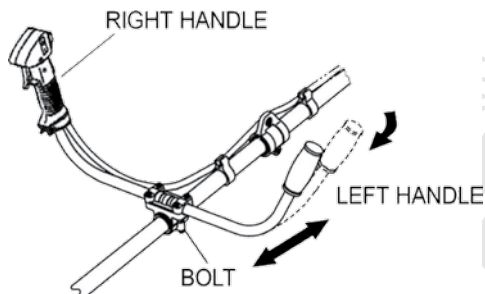

SAFETY RULES & PRECAUTIONS

Read the Operators Manual carefully. Be familiar with the controls and the proper use of the unit. How to turn the unit off, and how to unhook the harness quickly in an emergency.

1. Dress.

- Dress in Long sleeve clothing and long pants.
- Do not Wear loose clothing
- Wear gloves when operation
- Put on hat with brim or helmet.
- Wear safety shoes to prevent falls
- Wear goggles to protect eyes
- Put on hearing protection to avoid buzz.



ENVIRONMENTAL PRECAUTIONS

- Do not operate under hot or cold weather in a long time. Take enough rest.



- Do not operate during rainy day.



SAFETY OPERATOR

- **Do not operate under following situation. Drunk, Children or infants.**

Never allow anyone to use the unit without proper instruction.

Under the influence of alcohol, drugs, medications or affect your vision, dexterity or judgment.

Have enough rest and sleep for continuous operation.


Do not operate under menses or pregnancy.

STRICTLY NO FIRE


- Eliminate all sources of sparks of flame (including smoking), open flames or work that could cause sparks.
- Do not smoke when engine is still running or refuel.



- Do not refuel a hot engine. Wait until the engine has cooled down.

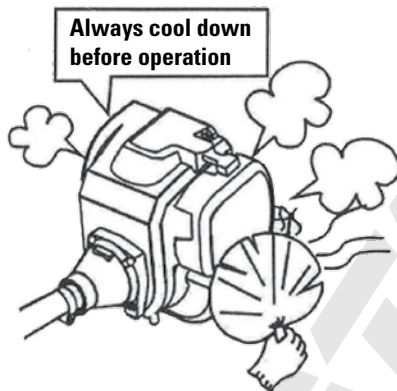

- **Avoid spilling fuel or oil.** Spilt fuel should always be wiped up.

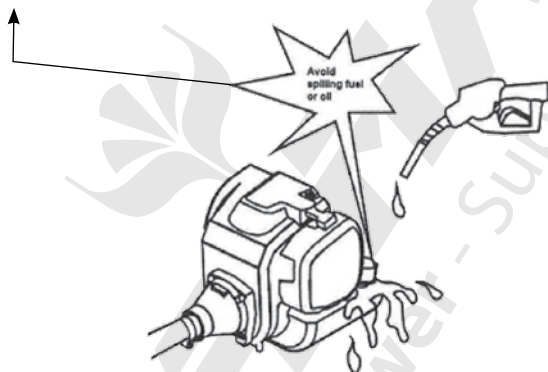


- Move at least three meters away from the fueling point before starting engine.
- Always start engine in outdoors.

CHECKS BEFORE STARTING


- Check fuel tank to prevent leakage
- Always install sharp blade
- Do not install any abnormal blade
- Always assemble safety devices properly.



- Inspect the entire unit before using each time. Especially tighten the screws of blade and clutch case.

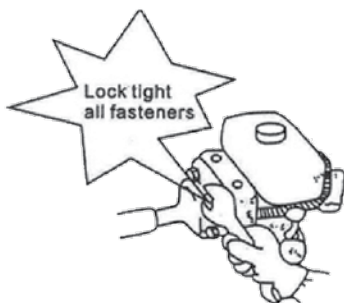


- **Do not** use any accessory other than those supplied by the manufacturer for use with this particular unit

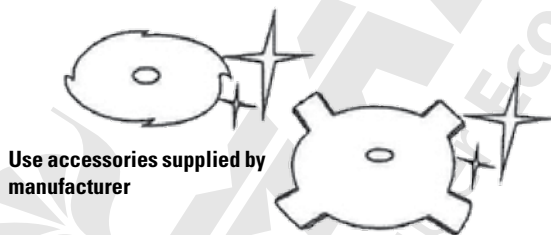

- Keep people out of the danger zone during cranking.



- Hold the unit down firmly to prevent losing control when cranking
- Making sure the blade is above ground and is not in touch with anything before cranking

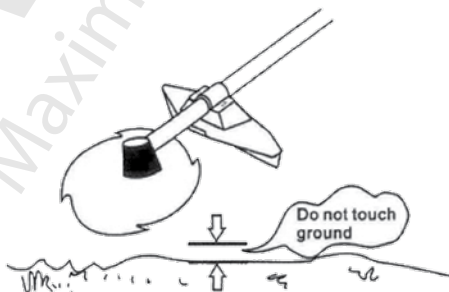

CAUTIONS DURING OPERATION


- Shut down immediately if the unit starts to shake or vibrate.









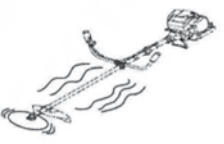


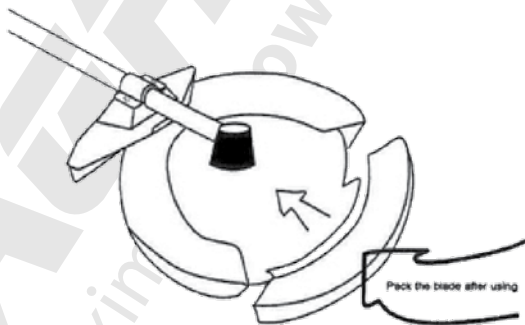




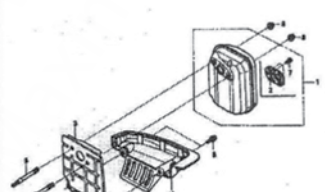
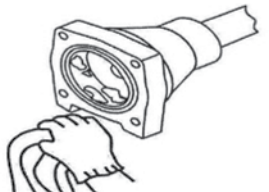
- Always keep both hand on the control handles. Do not operate one-handed.
- Do not put hands or feet near or under rotating parts while engine is running.
- The muffler side of the engine should be away from your body to avoid arm burns.

PRECAUTIONS AFTER OPERATION

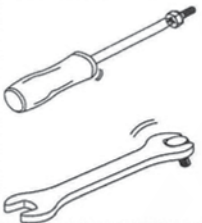
- Pack the blade after using



- Do not store the unit with fuel in the tank, because a fuel leak could start a fire. Allow the engine to cool before storing.
- Before cleaning, repairing or inspecting, make sure blade has stopped. Disconnect and secure the spark plug wire away from plug to prevent accidental starting.
- Store in a dry area out of reach of children.

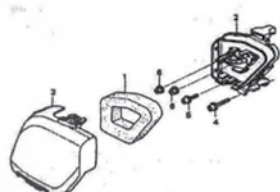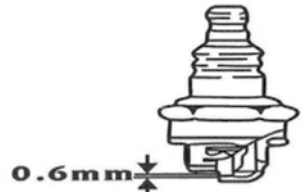
<p>Before starting work</p> 	<p>Check sharp blade</p> 	<p>Lock screw tight</p> 	<p>Check safety guard</p> 
	<p>Cleaning gear case</p> 	<p>Lock blade tight</p> 	<p>Visual Check main pip</p> 
<p>Every 25 Hours</p>  <p>25H</p>	<p>Supply gear case grease</p> 	<p>Lubricate flexible cable (For backpack type)</p> 	
<p>Every 50 Hours</p>  <p>50H</p>	<p>Cleaning air filter</p> 	<p>Clean & adjust spark plug</p>  <p>0.6 mm</p>	
<p>Every 100 Hours</p>  <p>100H</p>	<p>Cleaning Silencer</p> 	<p>Cleaning clutch drum</p> 	

AMH-200-4S-PRO Plus-Brush Cutter-Shaft A - Diagram & Part No.

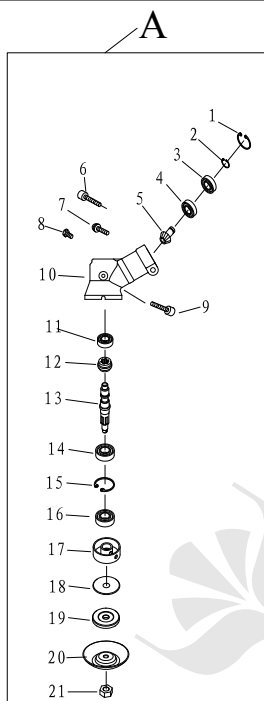


Sr. No	Part No.	Part Name
A	AMH-200-4S-PRO-TA	GEAR CASE ASS'Y
1	AMH-200-4S-PRO -TA-01	STOP RING 28
2	AMH-200-4S-PRO -TA-02	STOP RING 12
3	AMH-200-4S-PRO -TA-03	BEARING
4	AMH-200-4S-PRO -TA-04	BEARING
5	AMH-200-4S-PRO -TA-05	PINION
6	AMH-200-4S-PRO -TA-06	SCREWM6×35
7	AMH-200-4S-PRO -TA-07	SCREW M5×12
8	AMH-200-4S-PRO -TA-08	SCREW M5×8
9	AMH-200-4S-PRO -TA-09	SCREW M6×8
10	AMH-200-4S-PRO -TA-10	GEAR CASE
11	AMH-200-4S-PRO -TA-11	BEARING
12	AMH-200-4S-PRO -TA-12	GEAR
13	AMH-200-4S-PRO -TA-13	GEAR SHAFT
14	AMH-200-4S-PRO -TA-14	BEARING
15	AMH-200-4S-PRO -TA-15	STOP RING 35
16	AMH-200-4S-PRO -TA-16	OIL SEAL
17	AMH-200-4S-PRO -TA-17	HOLDER A
18	AMH-200-4S-PRO -TA-18	WASHER
19	AMH-200-4S-PRO -TA-19	HOLDER B
20	AMH-200-4S-PRO -TA-20	COVER
21	AMH-200-4S-PRO -TA-21	NUT

AMH-200-4S-PRO Plus-Brush Cutter-Shaft B - Diagram & Part No.

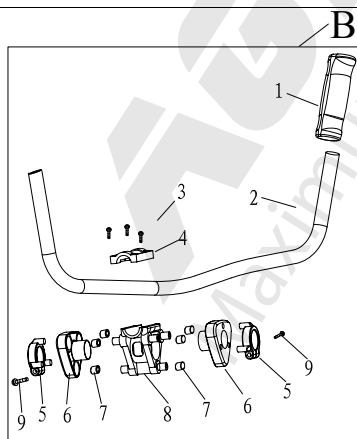


Sr. No	Part No.	Part Name
1	AMH-200-4S-PRO -TB-01	RUBBER RINGER
2	AMH-200-4S-PRO -TB-02	HANDGRIP
3	AMH-200-4S-PRO -TB-03	SCREW M5×25
4	AMH-200-4S-PRO -TB-04	CAP,UPPER
5	AMH-200-4S-PRO -TB-05	CLAMP RING
6	AMH-200-4S-PRO -TB-06	LINKER
7	AMH-200-4S-PRO -TB-07	RUBBER
8	AMH-200-4S-PRO -TB-08	CAP,LOWER
9	AMH-200-4S-PRO -TB-09	SCREW M5X25

AMH-200-4S-PRO Plus-Brush Cutter-Shaft C - Diagram & Part No.

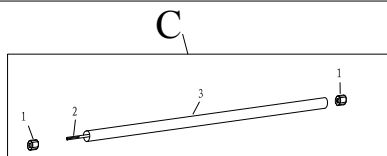


Sr.No	Part No.	Part Name
C	AMH-200-4S-PRO -TC-01	PIPE COMP.
1	AMH-200-4S-PRO -TC-02	DRIVE BEARING
2	AMH-200-4S-PRO -TC-03	DRIVE SHAFT
3	AMH-200-4S-PRO -TC-04	PIPE

AMH-200-4S-PRO Plus-Brush Cutter-Shaft D - Diagram & Part No.

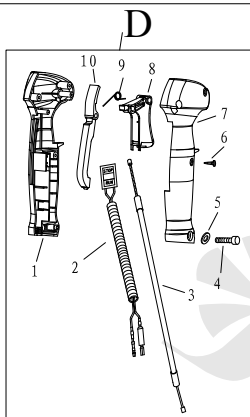


Sr.No	Part No.	Part Name
D	AMH-200-4S-PRO-TD-01	LEVER ASS'Y
1	AMH-200-4S-PRO-TD-02	BOX,LEFT
2	AMH-200-4S-PRO-TD-03	STOP BUTTON COMP.
3	AMH-200-4S-PRO-TD-04	CABLE COMP.
4	AMH-200-4S-PRO-TD-05	BOLT M5×30
5	AMH-200-4S-PRO-TD-06	WASHER 5
6	AMH-200-4S-PRO-TD-07	BOLT ST3.5×13
7	AMH-200-4S-PRO-TD-08	BOX,RIGHT
8	AMH-200-4S-PRO-TD-09	HANDGRIP
9	AMH-200-4S-PRO-TD-10	SPRING
10	AMH-200-4S-PRO-TD-11	HANDGRIP

AMH-200-4S-PRO Plus-Brush Cutter-Shaft E - Diagram & Part No.

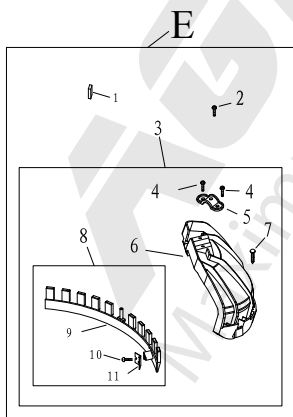


Sr.No	Part No.	Part Name
E		
1	AMH-200-4S-PRO-TE-01	BLADE COVER
2	AMH-200-4S-PRO-TE-02	BOLT M5×10
3	AMH-200-4S-PRO-TE-03	GUARD ASS'Y
4	AMH-200-4S-PRO-TE-04	BOLT M5×12
5	AMH-200-4S-PRO-TE-05	SAFETY GUARD BRACKET
6	AMH-200-4S-PRO-TE-06	SAFETY GUARD
7	AMH-200-4S-PRO-TE-07	SCREW ST4.2×16
8	AMH-200-4S-PRO-TE-08	GUARD ASS'Y
9	AMH-200-4S-PRO-TE-09	GUARD
10	AMH-200-4S-PRO-TE-10	SCREW ST4.2×16
11	AMH-200-4S-PRO-TE-11	BLADE

AMH-200-4S-PRO Plus-Brush Cutter-Shaft F - Diagram & Part No.

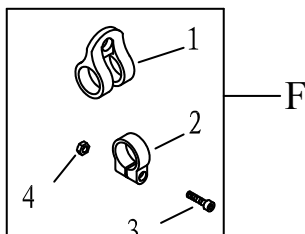


Sr. No	Part No.	Part Name
F	AMH-200-4S-PRO-TF	HOLDER ASSY
1	AMH-200-4S-PRO-TF-01	HARNESS CLAMP
2	AMH-200-4S-PRO-TF-02	CLAMP
3	AMH-200-4S-PRO-TF-03	SCREW M5×20
4		NUTM5

AMH-200-4S-PRO Plus-Brush Cutter-Shaft G - Diagram & Part No.

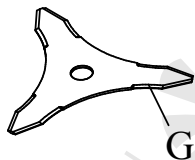


Sr. No	Part No.	Part Name
G	AMH-200-4S-PRO-TG	BLADE

AMH-200-4S-PRO Plus-Brush Cutter-Shaft H - Diagram & Part No.

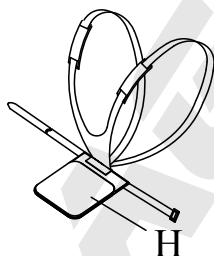


Sr. No	Part No.	Part Name
H	AMH-200-4S-PRO-TH	HARNESS ASS'Y

AMH-200-4S-PRO Plus-Brush Cutter-Shaft I - Diagram & Part No.

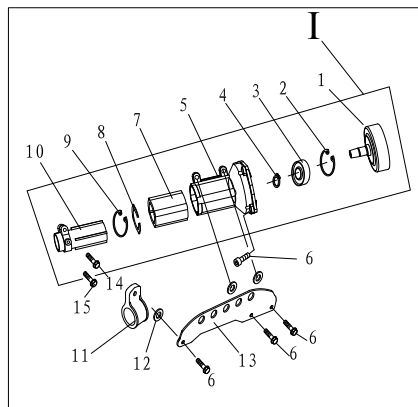

Sr. No	Part No.	Part Name
I	AMH-200-4S-PRO-TI	CLUCH COMP.
1	AMH-200-4S-PRO-TI-01	CLUCH DRUM COMP.
2	AMH-200-4S-PRO-TI-02	STOP RING 35
3	AMH-200-4S-PRO-TI-03	BEARING
4	AMH-200-4S-PRO-TI-04	STOP RING 15
5	AMH-200-4S-PRO-TI-05	CLUCH CASE
6	AMH-200-4S-PRO-TI-06	SCREW M6x20
7	AMH-200-4S-PRO-TI-07	RUBBER
8	AMH-200-4S-PRO-TI-08	WASHER
9	AMH-200-4S-PRO-TI-09	STOP RING 48
10	AMH-200-4S-PRO-TI-10	LINKER
11	AMH-200-4S-PRO-TI-11	HANG RING
12	AMH-200-4S-PRO-TI-12	WASHER
13	AMH-200-4S-PRO-TI-13	HANG HANDLE
14	AMH-200-4S-PRO-TI-14	BOLT M6x30
15	AMH-200-4S-PRO-TI-15	BOLT M5x12

AMH-200-4S-PRO Plus-Brush Cutter-Shaft J - Diagram & Part No.

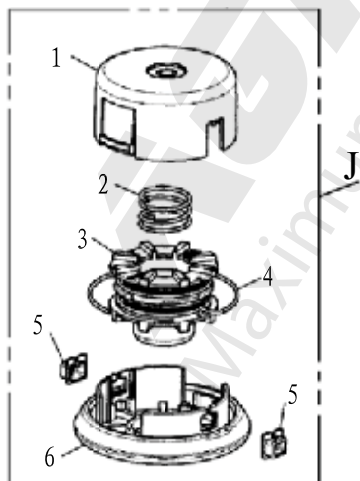

Sr. No	Part No.	Part Name
J	AMH-200-4S-PRO-TJ	NYLON CUTTER HEAD
1	AMH-200-4S-PRO-TJ-01	Case
2	AMH-200-4S-PRO-TJ-02	Spring
3	AMH-200-4S-PRO-TJ-03	Cord Holder
4	AMH-200-4S-PRO-TJ-04	Cord dia 2.5x5000
5	AMH-200-4S-PRO-TJ-05	Cord Cover
6	AMH-200-4S-PRO-TJ-06	Cover

INSPECTION & MAINTENANCE

For safety use, make sure the machine is cleaned every three-months. Before working, make sure to inspect the filter and the nozzle, and ensure there is no impurity. After working, make sure there is no water in the pump and the hose.

If the machine needs to be repaired in the guarantee period, please return the machine to the shop. You need to provide the certificate of purchase in order to repair or get the substitute.

Before Packing, the machine should be cleaned, then use closed packaging, packaging should be firm. Store the machine in dry place.

For transportation safety. The machine should comply with ISTA.



Meaning of crossed - out wheeled dustbin:

Do not dispose of electrical machines as unsorted municipal waste, use separate collection facilities.

If electrical machines are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for disposals at least free of charge.

Warranty Card

CUSTOMER COPY



Purchaser's Name & Address

Product Name

AMH 200 4S PRO+ Brush Cutter/Power Weeder

Product Serial No.

Invoice / DN No.

Date of Delivery

Dealer's Office Seal

Dealer Sign

Customer Sign.

I/We accept the terms and conditions of Warranty as in the Warranty Card.

Warranty Card

DEALER'S COPY



Purchaser's Name & Address

Product Name

AMH 200 4S PRO+ Brush Cutter/Power Weeder

Product Serial No.

Invoice / DN No.

Date of Delivery

Dealer's Office Seal

Dealer Sign

Customer Sign.

I/We accept the terms and conditions of Warranty as in the Warranty Card.

Warranty Card

COMPANY COPY



Purchaser's Name & Address

Product Name

AMH 200 4S PRO+ Brush Cutter/Power Weeder

Product Serial No.

Invoice / DN No.

Date of Delivery

Dealer's Office Seal

Dealer Sign

Customer Sign.

I/We accept the terms and conditions of Warranty as in the Warranty Card.

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. **LIMITED WARRANTY OBLIGATION** : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. **TERMS & CONDITIONS** : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. **LIMITED WARRANTY OBLIGATION** : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. **TERMS & CONDITIONS** : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. **LIMITED WARRANTY PERIOD** : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. **LIMITED WARRANTY OBLIGATION** : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. **TERMS & CONDITIONS** : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction



**ratnagiri
impex**
BRIDGING THE FUTURE - NOW

1st Free Service Coupon

ISO 9001-2008
CERTIFIED COMPANY

FREE SERVICE COUPON (30 Days / 20 hrs (Which ever is earlier))

Model
AMH 200 4S PRO+ Brush Cutter/ Power Weeder

Serial Number

PDI Date

Purchase bill no. Date

Service No.

Dealer's Office Seal

- Operations:
- Check and Test the Fuel Mixture.
 - Check and Clean the Air Filter
 - Check, Clean and Adjust the Spark plug
 - Check and Adjust the Carburetor Tuning
 - Check and Sharpen the cutting Tools
 - Start and Check the Noise, Vibration, Loosen / Fasteners etc.
 - Product familiarization on Usage
 - Routine maintenance and Storage

Dealer Signature.....

Customer Signature.....

Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.



agriculture | horticulture | sericulture | plantations | forestry | garden | health care

WARRANTY AND FREE SERVICE COUPON



**ratnagiri
impex**
BRIDGING THE FUTURE - NOW

2nd Free Service Coupon

ISO 9001-2008
CERTIFIED COMPANY

FREE SERVICE COUPON (30 Days / 20 hrs (Which ever is earlier))

Model
AMH 200 4S PRO+ Brush Cutter/ Power Weeder

Serial Number

PDI Date

Purchase bill no. Date

Service No.

Dealer's Office Seal

- Operations:
- Check and Test the Fuel Mixture.
 - Check and Clean the Air Filter
 - Check, Clean and Adjust the Spark plug
 - Check and Adjust the Carburetor Tuning
 - Check and Sharpen the cutting Tools
 - Start and Check the Noise, Vibration, Loosen / Fasteners etc.
 - Product familiarization on Usage
 - Routine maintenance and Storage

Dealer Signature.....

Customer Signature.....

Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.



agriculture | horticulture | sericulture | plantations | forestry | garden | health care

WARRANTY AND FREE SERVICE COUPON



**ratnagiri
impex**
BRIDGING THE FUTURE - NOW

3rd Free Service Coupon

ISO 9001-2008
CERTIFIED COMPANY

FREE SERVICE COUPON (30 Days / 20 hrs (Which ever is earlier))

Model
AMH 200 4S PRO+ Brush Cutter/ Power Weeder

Serial Number

PDI Date

Purchase bill no. Date

Service No.

Dealer's Office Seal

- Operations:
- Check and Test the Fuel Mixture.
 - Check and Clean the Air Filter
 - Check, Clean and Adjust the Spark plug
 - Check and Adjust the Carburetor Tuning
 - Check and Sharpen the cutting Tools
 - Start and Check the Noise, Vibration, Loosen / Fasteners etc.
 - Product familiarization on Usage
 - Routine maintenance and Storage

Dealer Signature.....

Customer Signature.....

Conditions: Operations listed have been performed to my entire satisfaction without any labour charges. Only consumables were charged.



agriculture | horticulture | sericulture | plantations | forestry | garden | health care

WARRANTY AND FREE SERVICE COUPON



Small Maintenance. Big Savings.



Small Maintenance. Big Savings.




Small Maintenance. Big Savings.

Do's & Don'ts

- Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
- It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines.
- Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments.
- Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
- Always keep the equipments in good working condition to minimise loss of output as well as to reduce the pollution and save the environment.
- Do not use the machine within range of persons unless they wear protective clothing.
- Do not operate the machine when fatigued or under the influence of alcohol or drugs.
- For more query kindly contact for our Service Center/Dealer/ franchise

Agrimate Army For Pest Control

ANY WHERE - ANY TIME - ANY CROP

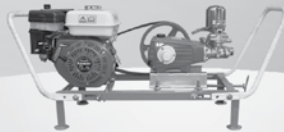


AGRIMATE®
Maximum Power - Super Economy

RATNAGIRI IMPEX PVT. LTD.
Annapurna House, #1/1G, 7th Cross, New Guddadahalli
Mysore Road, Bangalore - 560 026
Customer Care: 1800-425-3036
Email: marketing@ratnagiriimpex.com



Marketed by:
 **ratnagiri
impex**
BRINGING YOU THE FUTURE... NOW

www.ratnagiriimpex.com

AN ISO 9001:2008 CERTIFIED COMPANY