


**AGRIMATE PORTABLE POWER SPRAYER
AMP-769-HCP**

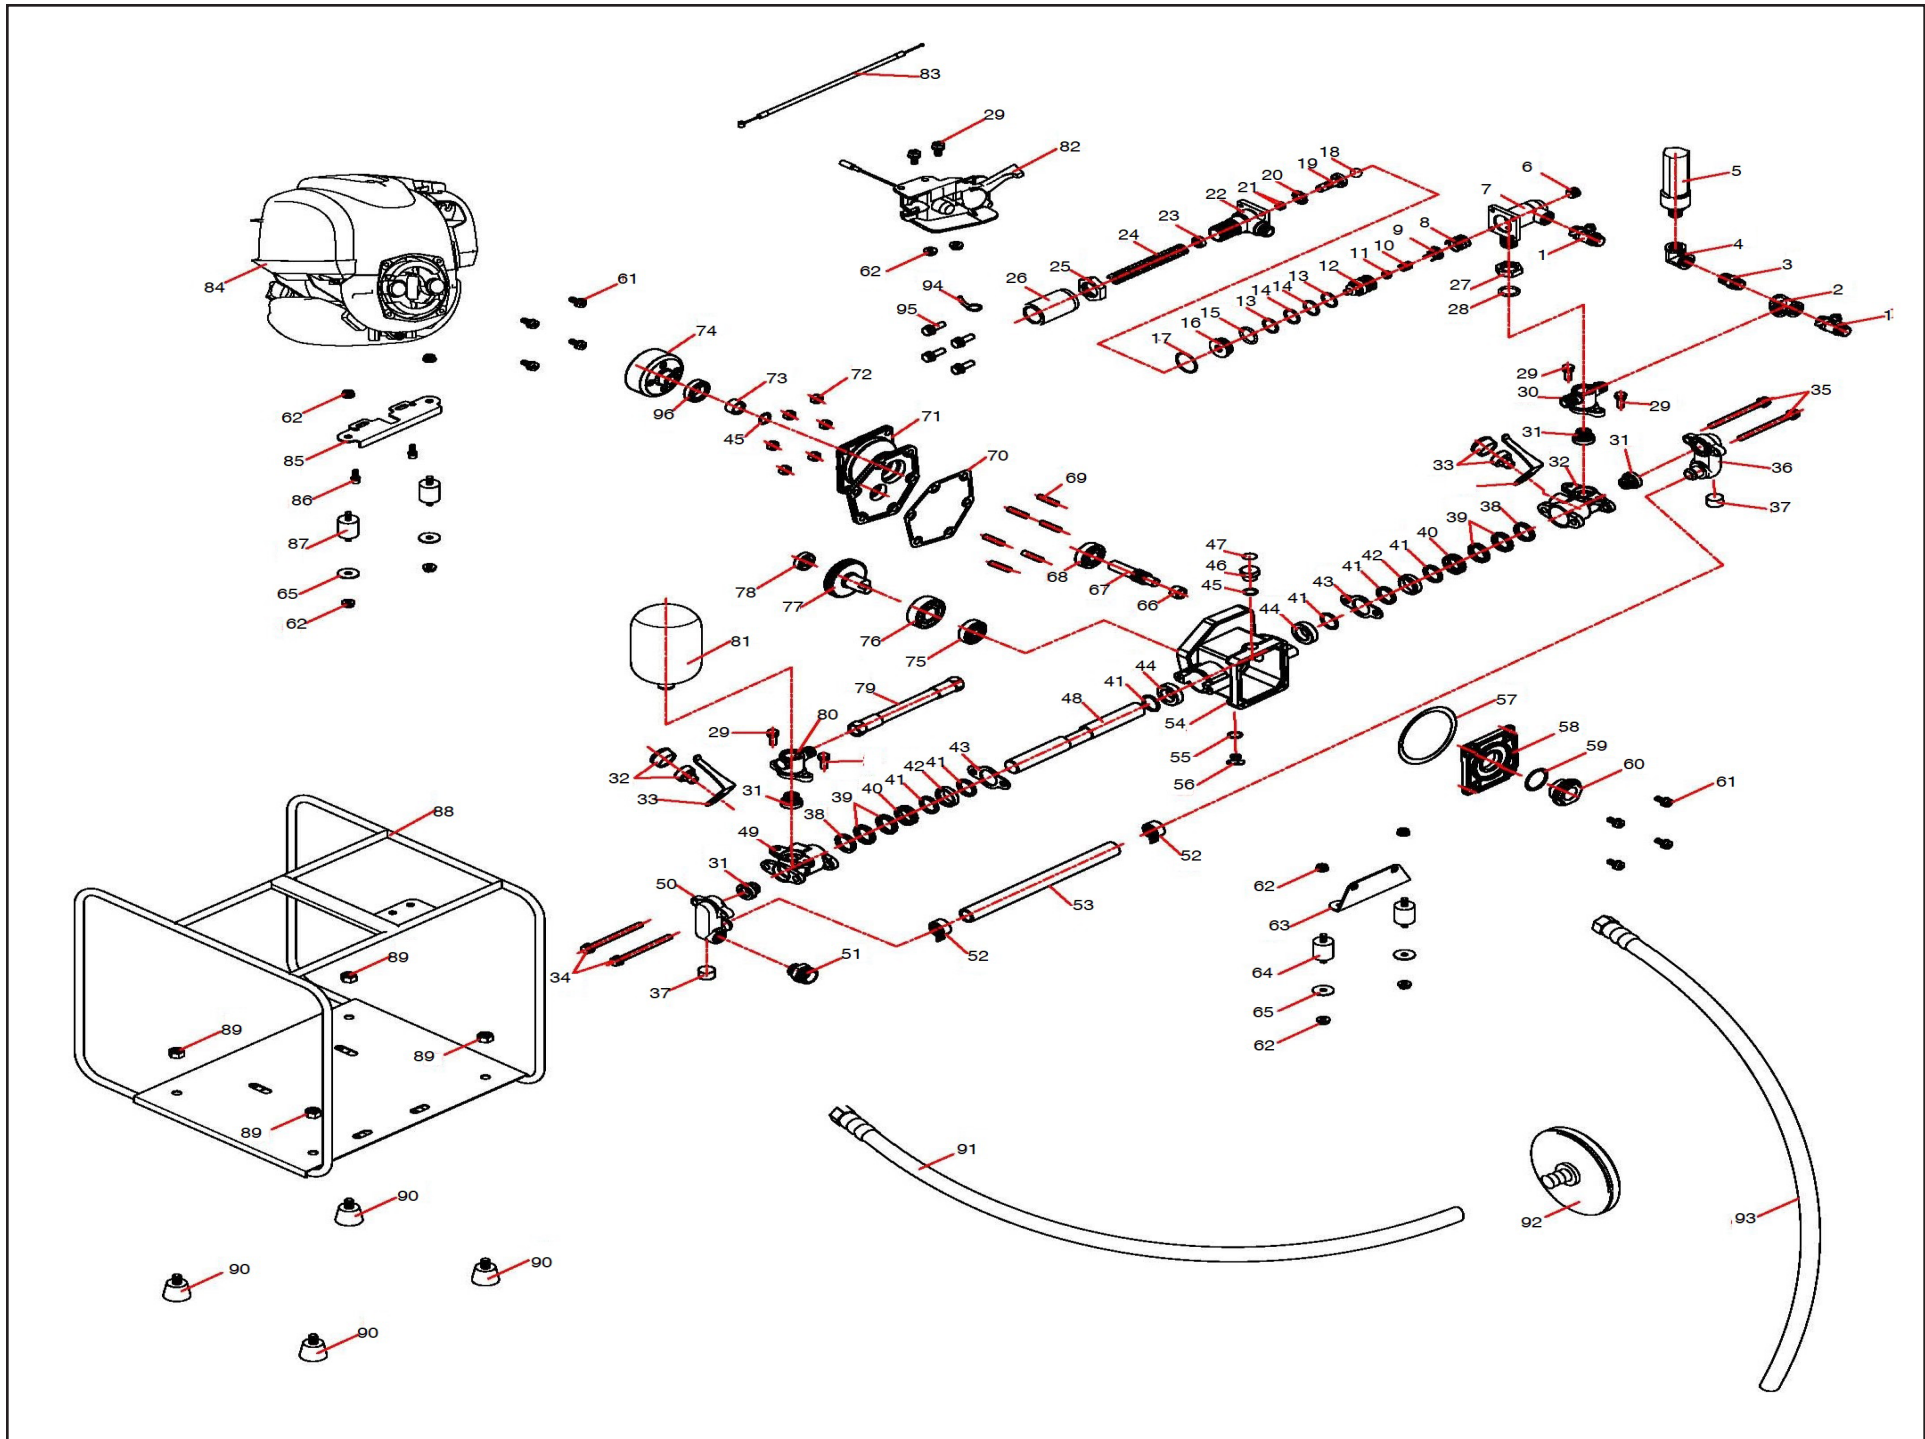





SL NO	PART NO	DESCRIPITON	SL NO	PART NO	DESCRIPTION
1	AM-769-HCP-P01	Ball Valve	17	AM-769-HCP-P17	O-ring
2	AM-769-HCP-P02	Tee Coupling	18	AM-769-HCP-P18	Iron ball
3	AM-769-HCP-P03	Adapter	19	AM-769-HCP-P19	Pressure regulating lever
4	AM-769-HCP-P04	Elbow bend	20	AM-769-HCP-P20	damping washer
5	AM-769-HCP-P05	Pressure Guage	21	AM-769-HCP-P21	O-ring
6	AM-769-HCP-P06	Bolt	22	AM-769-HCP-P22	Pressure regulating valve seat
7	AM-769-HCP-P07	Drain valve	23	AM-769-HCP-P23	Pressure regulating gasket
8	AM-769-HCP-P08	adjust spring	24	AM-769-HCP-P24	Pressure regulating spring
9	AM-769-HCP-P09	Adjust base	25	AM-769-HCP-P25	adjust nut
10	AM-769-HCP-P10	Outlet spring	26	AM-769-HCP-P26	Pressure regulating nut
11	AM-769-HCP-P11	Outlet valve	27	AM-769-HCP-P27	Lock Nut
12	AM-769-HCP-P12	Drain valve base	28	AM-769-HCP-P28	O-ring
13	AM-769-HCP-P13	Cushion	29	AM-769-HCP-P29	Bolt
14	AM-769-HCP-P14	O-ring	30	AM-769-HCP-P30	Outlet chamber
15	AM-769-HCP-P15	O-ring	31	AM-769-HCP-P31	valve
16	AM-769-HCP-P16	Valve seat	32	AM-769-HCP-P32	left pressure chamber

SL NO	PART NO	DESCRIPITON	SL NO	PART NO	DESCRIPTION
33	AM-769-HCP-P33	Grease cup	49	AM-769-HCP-P49	Right pressure chamber
34	AM-769-HCP-P34	Limit seat	50	AM-769-HCP-P50	Left inlet chamber
35	AM-769-HCP-P35	Bolt	51	AM-769-HCP-P51	Inlet adapter
36	AM-769-HCP-P36	Right inlet chamber	52	AM-769-HCP-P52	Clamp
37	AM-769-HCP-P37	Plug	53	AM-769-HCP-P53	Inlet Tube
38	AM-769-HCP-P38	Lock ring set	54	AM-769-HCP-P54	Gear base
39	AM-769-HCP-P39	V-ring	55	AM-769-HCP-P55	O -Ring
40	AM-769-HCP-P40	Grease rint set	56	AM-769-HCP-P56	Oil Drain bolt
41	AM-769-HCP-P41	O-ring	57	AM-769-HCP-P57	O ring
42	AM-769-HCP-P42	Sealed support ring	58	AM-769-HCP-P58	Gear housing cover
43	AM-769-HCP-P43	SS gasket	59	AM-769-HCP-P59	O - Ring
44	AM-769-HCP-P44	Skelton oil seal	60	AM-769-HCP-P60	Oil lens
45	AM-769-HCP-P45	O-ring	61	AM-769-HCP-P61	Bolt
46	AM-769-HCP-P46	Oil bolt	62	AM-769-HCP-P62	Nut
47	AM-769-HCP-P47	Seal sleeve	63	AM-769-HCP-P63	Engine support
48	AM-769-HCP-P48	Plunger	64	AM-769-HCP-P64	damping feet

SL NO	PART NO	DESCRIPITON	SL NO	PART NO	DESCRIPTION
65	AM-769-HCP-P65	Flat gasket	81	AM-769-HCP-P81	Pressure Tank
66	AM-769-HCP-P66	Bearing	82	AM-769-HCP-P82	Throttle switch Assy
67	AM-769-HCP-P67	Stud Bolt	83	AM-769-HCP-P83	Throttle cable
68	AM-769-HCP-P68	Bearing	84	AM-769-HCP-P84	Engine
69	AM-769-HCP-P69	Stud Bolt	85	AM-769-HCP-P85	Connectimng plate
70	AM-769-HCP-P70	Seal Sleeve	86	AM-769-HCP-P86	Bolt
71	AM-769-HCP-P71	Gear housing	87	AM-769-HCP-P87	Damping feet
72	AM-769-HCP-P72	Nut	88	AM-769-HCP-P88	Square Frame
73	AM-769-HCP-P73	Seal Sleeve	89	AM-769-HCP-P89	Nut
74	AM-769-HCP-P74	Clutch Drum	90	AM-769-HCP-P90	Rubber feet
75	AM-769-HCP-P75	Bearing	91	AM-769-HCP-P91	Inlet Tube
76	AM-769-HCP-P76	Bearing	92	AM-769-HCP-P92	Filter
77	AM-769-HCP-P77	Big Bear	93	AM-769-HCP-P93	Return Pipe
78	AM-769-HCP-P78	Bearing	94	AM-769-HCP-P94	Cable Clip
79	AM-769-HCP-P79	High Pressure Hose	95	AM-769-HCP-P95	Bolt
80	AM-769-HCP-P80	Outlet Chamber	96	AM-769-HCP-P96	Skeleton Oil seal

SL NO	PART NO	PART IMAGE	DESCRIPITON	SL NO	PART NO	PART IMAGE	DESCRIPITON
1	AM-AX35-E01		Hex flange surface screw	11	AM-AX35-E11		Valve locker
2	AM-AX35-E02		Engine plastic cover	12	AM-AX35-E12		Valve spring
3	AM-AX35-E03		Self-tapping screw	13	AM-AX35-E13		Spark plug
4	AM-AX35-E04		Cylinder cover	14	AM-AX35-E14		Valve adjusting screw
5	AM-AX35-E05		Wind pipe	15	AM-AX35-E15		Valve adjusting nut
6	AM-AX35-E06		Inside cover	16	AM-AX35-E16		Exhaust rocker arm
7	AM-AX35-E07		Oil gas separator	17	AM-AX35-E17		Intake rocker arm
8	AM-AX35-E08		Screw	18	AM-AX35-E18		Roker pin
9	AM-AX35-E09		Oil sucker cover	19	AM-AX35-E19		Exhaust valve rocker
10	AM-AX35-E10		Cylinder cover seal	20	AM-AX35-E20		Intake valve rocker






21	AM-AX35-E21	Synchronous belt		31	AM-AX35-E31	Baffle	
22	AM-AX35-E22	Cam wheel		32	AM-AX35-E32	Ignition stator	
23	AM-AX35-E23	Camshaft		33	AM-AX35-E33	Stopping wire	
24	AM-AX35-E24	Starter		34	AM-AX35-E34	Screw	
25	AM-AX35-E25	Screw		35	AM-AX35-E35	Exhaust valve	
26	AM-AX35-E26	Muffler baffle		36	AM-AX35-E36	Intake valve	
27	AM-AX35-E27	Muffler		37	AM-AX35-E37	Admitting gasket	
28	AM-AX35-E28	Screw		38	AM-AX35-E38	O-seal ring	
29	AM-AX35-E29	Screw		39	AM-AX35-E39	Screw	
30	AM-AX35-E30	Muffler baffle-2		40	AM-AX35-E40	Admitting pipe	

25-1	AM-AX35-E25.1	Screw		51	AM-AX35-E51	NO.2 piston ring
41	AM-AX35-E41	Carburetor gasket		52	AM-AX35-E52	Liner ring
42	AM-AX35-E42	Carburetor		53	AM-AX35-E53	Oil scraper ring
44	AM-AX35-E44	Nut		54	AM-AX35-E54	Piston
45	AM-AX35-E45	Screw		55	AM-AX35-E55	Piston pin
46	AM-AX35-E46	Cleaner inside cover		56	AM-AX35-E56	Ring
47	AM-AX35-E47	Filter net		57	AM-AX35-E57	Start reel
48	AM-AX35-E48	Air filter cover		58	AM-AX35-E58	Oil seal
49	AM-AX35-E49	Cylinder		59	AM-AX35-E59	Crankshaft
50	AM-AX35-E50	NO.1 piston ring		60	AM-AX35-E60	Key

61	AM-AX35-E61	Oil seal	74	AM-AX35-E74	O-seal ring
62	AM-AX35-E62	Magneto rotor comp.	75	AM-AX35-E75	Oil scale
63	AM-AX35-E63	Washer	76	AM-AX35-E76	Reed vavle
64	AM-AX35-E64	Nut	77	AM-AX35-E77	Reed vavle gasket
65	AM-AX35-E65	Magneto cover	78	AM-AX35-E78	Crankcase
66	AM-AX35-E66	Washer	79	AM-AX35-E79	Screw
67	AM-AX35-E67	Clutch	82	AM-AX35-E82	Fuel tank lid
68	AM-AX35-E68	Washer	83	AM-AX35-E83	Fuel pipe
69	AM-AX35-E69	Screw pin	84	AM-AX35-E84	Clamp
70	AM-AX35-E70	Holding-down clip	85	AM-AX35-E85	Filter
71	AM-AX35-E71	Balancing pressure pipe	86	AM-AX35-E86	Screw
72	AM-AX35-E72	Holding-down clip	87	AM-AX35-E87	Fuel tank cover
73	AM-AX35-E73	Pin			






WARRANTY CARD

CUSTOMER COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	 CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
			

 




I/Will accept the terms and conditions of warranty as in the warranty card

DEALERS COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	 CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
			

I/Will accept the terms and conditions of warranty as in the warranty card

COMPANY COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____	 CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
			

I/Will accept the terms and conditions of warranty as in the warranty card

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imburement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction



FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

OPERATIONS

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

OPERATIONS

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE


DEALERS OFFICE SEAL

- 1. Check and test the fuel mixture
- 3. Check , clean and adjust the spark plug
- 5. Check and sparken the cutting tools
- 7. Start and check the noise, vibration, loosen etc..

OPERATIONS

- 2. check and clean the air filter
- 4. Check and adjust the carburetor tuning
- 6. Product familirisation on usage
- 8. Routine maintenance and shortage.

DOS


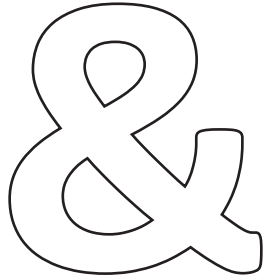


DONT'S

1. Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
2. It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines
3. Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments
4. Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
5. Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment
6. Do not use the machine within range of persons unless they wear protective clothing
7. Do not operate the machine when fatigued or under the influence of alcohol or drugs
8. When the machine is running, please maintain a constant water supply. Without water circulation will damage the sealing rings of the machine.
9. For more query kindly contact for our Service Center/Dealer/ franchise

Agrimate Army For Pest Control

ANY WHERE - ANY TIME - ANY CROP

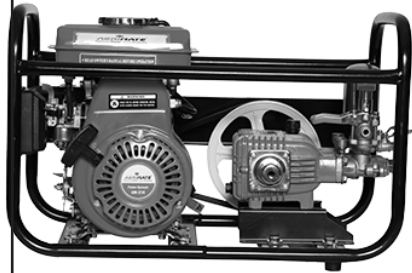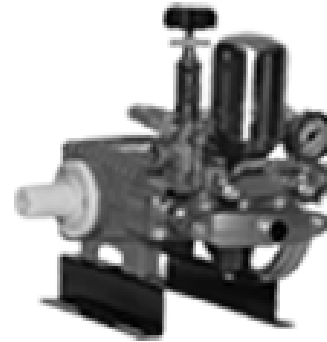

Marketed by:
**ratnagiri
impex**
BRINGING YOU THE FUTURE... NOW

RATNAGIRI IMPEX PVT., LTD.,

Annapurna House, #1 / 1G, 7th Cross, New
Guddadahalli

Mysore Road, Bangalore - 560 026

Missed Call : 7393 938 938

Email: ask@agrimart.in