

## AM16-CHAMPION KNAPSACK MANUAL SPRAYER





BEFORE OPERATING THIS MACHINE,
PLEASE READ THESE INSTRUCTIONS CAREFULLY

DISCLAIMER: DUE TO CONSTANT UPGRADATION, FEATURES AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTIC





### Dear Sir/Madam,

Thank you for choosing Agrimate product. You are the proud owner of high technology and durable machine. Trust that our franchisee/dealer installed the product and explained you about the usage and service instructions. Please visit our authorised dealer for your future requirement of our other equipments, genuine spares, accessories and service. Service coupons are attached with this manual and you can avail free service.

### **About Ratnagiri**

We import and market of high quality of agriculture wide range of equipment's Which we are selling through our authorized franchisee or dealer network. We are in this field from past 20 years serving the former community. For further details, you may please visit our website www.agrimart.in.



Agriculture | Horticulture | Sericulture | Plantations | Forestry | Garden | Health care

## Salient Features:

- $\bullet\,$  Tank body inspired from the shape of Human Backbone & ribcage.
- Very Strong & Durable Sprayer.

## SPECIFICATIONS

CAPACITY : 16L

TANK MATERIAL : PP

WORKING PRESSURE : Upto 0.20-0.45MPA

: SS TELESOPIC LANCE WITH 4NO77LES

## SAFETY PRECAUTIONS FOR MANAULLY OPERATED SPRAYER

- Read all the instructions given in operating manual strictly before use
   Do not clean cloqqed nozzle by mouth
- 3. Do not allow the children near sprayer and pesticide container.
- 4. Do not contact pesticide with bare hand
- 5. Always spray in the wind direction

6. Always use safety hand gloves and goggles.

- 7. Put gasket in joints to avoid leakage. Repair the leaking part.
- 7. Put gasket in joints to avoid leakage. Repair the leaking par
- 8. Mount the sprayer correctly on the back of the operator to avoid accident in the knapsack sprayer.
- $9. \ \ \, \text{Do not spill chemical solutions to avoid contact of pesticide with human being}$
- 10. Do not clean the sprayer in river or pond.
- 11. Keep the Sprayer / pesticide container in dry & cool place and away from food
- 12. Do not walk in the treated area.

3 STATE

GRIFIATE Power - Super Economy

INTRODUCTION Agrimate - 16 Knapsack Sprayer is a continuous type of sprayer. The tank has blow moulded with a carrying handle as integral part of the tank. A pump has been provided in the tank, which pumps out the liquid from the tank and discharges it through the outlet on the top of the pump cylinder. A big hole with a plastic cap and strainer is situated on the top of the tank. You can fill the chemical in the tank without spilling it. Because of the large filler hole. The agitator is attached to the pressure chamber, which agitates the liquid with every stroke of the pump. The sprayer is equipped with fan shape nozzle assembly, sealing washer cup ring & instruction manual. **START UP** 1. Join the hose to the lance and the chamber with the wedge which is served in the filter. Hold the belt in the base housing. 2. Release cover and pour in liquid to be sprayed without removing filter. 3. Fit the device to your back, adjusting the straps. 4. Work the lever 8 - 10 times to pressurize. Work the handle and adjust the nozzle until the required spray is obtained. Bear in mind that 6-8 strokes per minute will give a flow rate of 0.4-0.6L/Min Operation handle can be used with left hand or right hand by only changing position of the strap. **MAINTENANCE** The mechanism is so simple that it does not need special skill to service it. You will observe a pump-bearing ring within the bearing collar on the top of the tank for pump cylinder. Please keep it well lubricated for better results. It is advisable to flush out the sprayer with clean water through the nozzle after each days working. It is also absolutely necessary to rinse out the tank from within with clean water. The piston might need replacement when it becomes worn out. GRITIATE HIMATE

### AM16-CHAMPION KNAPSACK MANUAL SPRAYER

AGRIMATE

AGRITATE

AGRIMATE

AGF

AGRIMATE

AGRIMATE

AGRIMATE

AGR

AGR

AUR

AGR

AGR

AGR

AGR

AUT

AGR

AGR


AGR

AGA

AUTHATE

AGRIMATE

AGRIMATE

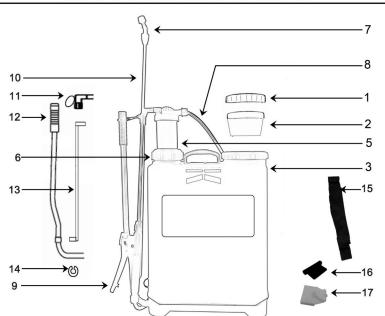

PARTS NO	DESCRIPTION	PARTS NO	DESCRIPTION
AM-CHAMPION-01	Tank cap	AM-CHAMPION-09	Trigger
AM-CHAMPION-02	Strainer	AM-CHAMPION-10	Indian lance
AM-CHAMPION-03	Tank	AM-CHAMPION-11	Link rod clip and Handle ring
AM-CHAMPION-05	Pressure pump	AM-CHAMPION-12	Handle
AM-CHAMPION-06	Pump ring cap	AM-CHAMPION-13	Link rod
AM-CHAMPION-07-1	Indian 5 holes nozzle	AM-CHAMPION-14	Handle C rock
AM-CHAMPION-07-2	Indian fan nozzle	AM-CHAMPION-15	Belt
AM-CHAMPION-07-3	Indian 4 holes nozzle	AM-CHAMPION-16	Belt clip
AM-CHAMPION-07-4	Indian double nozzle	AM-CHAMPION-17	Belt hook
AM-CHAMPION-08	Hose		

AGRIFIATE

AGRITATE

# AM16-CHAMPION KNAPSACK MANUAL SPRAYER

AGRIFIATE

AUTIFIATE Super Economy

AGRITIATE

AGR

AGR

AGR

AGR

AGR

AGR

AGRIMATE

AGR

AGR

AGRIMATE

AGRITIATE

РНОТО	PARTS NO  AM-CHAMPION-01	DESCRIPTION
0	AM CHAMDION 04	
	AIVI-CHAIVIFICIN-UI	Tank cap
	AM-CHAMPION-02	Strainer
desired.	AM-CHAMPION-03	Tank
	AM-CHAMPION-05	Pressure pump
	AM-CHAMPION-06	Pump ring cap
	AM-CHAMPION-07-1	Indian 5 holes nozzle
11-1-1	AM-CHAMPION-07-2	Indian fan nozzle
	AM-CHAMPION-07-3	Indian 4 holes nozzle
The	AM-CHAMPION-07-4	Indian double nozzle
<b>O</b> *	AM-CHAMPION-08	Hose
		AM-CHAMPION-03  AM-CHAMPION-05  AM-CHAMPION-06  AM-CHAMPION-07-1  AM-CHAMPION-07-2  AM-CHAMPION-07-3  AM-CHAMPION-07-4

## AM16-CHAMPION KNAPSACK MANUAL SPRAYER

AGRIMATE

AGRIFATE SUPPLEMENT

AGRIMATE

AGR

AGR

AGR

AGR

AGR

AGR

AGR

AGRITATE

AGRIFIATE

7 Super Economy

AGRIMATE

AGF

AGR

AGRIMATE

AGRIFIATE

AGRIFIATE

AGRITATE

AUTITATE

РНОТО	PARTS NO	DESCRIPTION
	AM-CHAMPION-09	Trigger
•	AM-CHAMPION-10	Indian lance
→ q	AM-CHAMPION-11	Link rod clip and Handle ring
	AM-CHAMPION-12	Handle
	AM-CHAMPION-13	Link rod
	AM-CHAMPION-14	Handle C rock
	AM-CHAMPION-15	Belt
	AM-CHAMPION-16	Belt clip
	AM-CHAMPION-17	Belt hook

AGTI Maximum Powe	MATE AGRIFATE AGRIFATE MAGNINATE MAG	AGRIFIATE AGRIFI	AGT Maximum Pov
	Warranty Card CUSTO	OMER COPY	
Maximum Pov	Purchaser's Name & Address	Date of Delivery	Maximum Pov
AGFI Maximum Pov			AG FI
9	Product Name  AM-405E-2IN1 MANUAL CUM BATTERY OPERATED SPRAYER	Dealer's Office Seal	V
Maximum Pov	Product Serial No.		Maximum Pov
AGR		Dealer Sign	AGR
Maximum	Invaire / DNI No	Customer Sign.	Wasan &
Maximum Pov	Invoice / DN No.	I/We accept the terms and conditions of Warranty as in the Warranty Card.	Maximum Pox
AGR			8
Maximum Pov		ER'S COPY	Maximum Por
AGR Maximum Pov	Purchaser's Name & Address	Date of Delivery	Maximum Pov
AGFT	Product Name	Dealer's Office Seal	AGR
Maximum Pov	AM-405E-2IN1 MANUAL CUM BATTERY OPERATED SPRAYER	5	Maximum Pov
AGR Maximum Pov	Product Serial No.		AG TO
		Dealer Sign	-
Maximum Pov	Invoice / DN No.	Customer Sign.  I/We accept the terms and conditions of Warranty	Maximum Pov
AGR		as in the Warranty Card.	AGR
9	Warranty Card COM	PANY COPY Trainager	8
Maximum Pov	Purchaser's Name & Address	Date of Delivery	Maximum Pov
AGRI Mavimum Pov		Dealer's Office Seal	AGFT Maximum Pox
Manne	Product Name  AM-405E-2IN1 MANUAL CUM BATTERY OPERATED SPRAYER	Dealer's Office Sear	ч
Maximum Pov	Product Serial No.		Maximum Poy
AGR		Dealer Sign	AGR
Maximum Pov	Invoice / DN No.	Customer Sign.	Maximum Por
Maximum Pov		I/We accept the terms and conditions of Warranty as in the Warranty Card.	AGF Maximum Pov
AGRI Maximum Powe	MATE AGRIFATE AGRIFATE AGRIFATE AGRIFATE	AGRIFIATE AGRIFI	AG TO Maximum Pov

1. LIMITED WARRANTY PERIOD: For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION: Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement, 3, TERMS & CONDITIONS; a, Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document.; b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser. WARRANTY null & void if Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc. Loss of any nature due to operation or non-operation is not covered under warranty. All free service are at Dealer's service point only. Warranty ceases if service is not done periodically. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd. 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects. 12. All disputes are subject to Bangalore Courts Jurisdiction 1. LIMITED WARRANTY PERIOD: For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION: Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS: a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser. WARRANTY null & void if (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc. 6. Loss of any nature due to operation or non-operation is not covered under warranty. 7. All free service are at Dealer's service point only. Warranty ceases if service is not done periodically. 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery. 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd. 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects. 12. All disputes are subject to Bangalore Courts Jurisdiction LIMITED WARRANTY PERIOD: For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED

WARRANTY OBLIGATION: Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS: a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document.: b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.


#### WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc., (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- All free service are at Dealer's service point only.
- 7. All need dervice are at Bearing a service point on
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction



AGE Super Economy



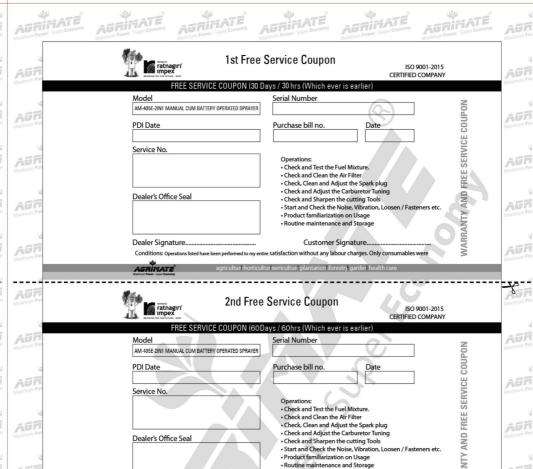

Dealer Signature Customer Signature.. Conditions: Opera ed have been performed to my entire satisfaction without any labour charges. Only consumables were Charged



## 3rd Free Service Coupon

ISO 9001-2015 CERTIFIED COMPANY

AGR

AGR

FREE SERVICE COUPON (90Days / 120hrs (Which ever is earlier) Serial Number AM-405E-2IN1 MANUAL CUM BATTERY OPERATED SPRAYER PDI Date Purchase bill no. Date Service No. · Check and Test the Fuel Mixture. · Check and Clean the Air Filter · Check, Clean and Adjust the Spark plug · Check and Adjust the Carburetor Tuning Dealer's Office Seal · Check and Sharpen the cutting Tools

• Start and Check the Noise, Vibration, Loosen / Fasteners etc.

• Product familiarization on Usage

• Routine maintenance and Storage

Customer Signature.... ions listed have been performed to my entire satisfaction without any labour charges. Only consumables were Charged

AGRIMATE

Dealer Signature..

OHITATE AURIMATE

AGRIMATE



AGR

- Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
- It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines.
- Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments.
- Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
- Always keep the equipments in good working condition to minimise loss of output as well as to reduce the pollution and save the environment.

Do not use the machine within range of persons unless they wear protective clothing.

- Do not operate the machine when fatigued or under the influence of alcohol or drugs.
- To reduce the risk of injury, close supervision is necessary when a machine is used near children. Equipment shall not be used by children or untrained person.

11 THATE

Disconnect from the battery power supply before carrying out user maintenance.

## **MULTIPLY PROFITS** WITH OUR MULTI CROP, MULTI PURPOSE EQUIPMENTS















MANUAL SPRAYER

POWER SPRAYER

POWER SPRAYER

ROTARY TILLER

CHAFF

TEA CUTTER PRUNER

FOGGER















POWER WEEDER

CHAINSAW

TILLER

IAWN MOWER

PRESSURE WASHER

FARTH AUGER

BIDE ON MOWER





**RANGE OF PRODUCTS** 







BACK PACK





MULTI TOOL







BACK PACK















AUGER





### OUR RETAIL FORMATS







IMPORTERS & MARKETED BY

Ratnagiri Impex Pvt. Ltd. Annapurna House, # 1/1G, 7th Cross New Guddadahalli. Mysore Road Bangalore - 560 026, India Ph: 080-26985100/1/2 Email: info@ratnagiriimpex.com







An ISO 9001:2015 Certified Company