


USER MANUAL AGRIMATE CHAIN SAW

AM-CS-6022K- PRO ☐

AM-CS-6022K-NEO ☐

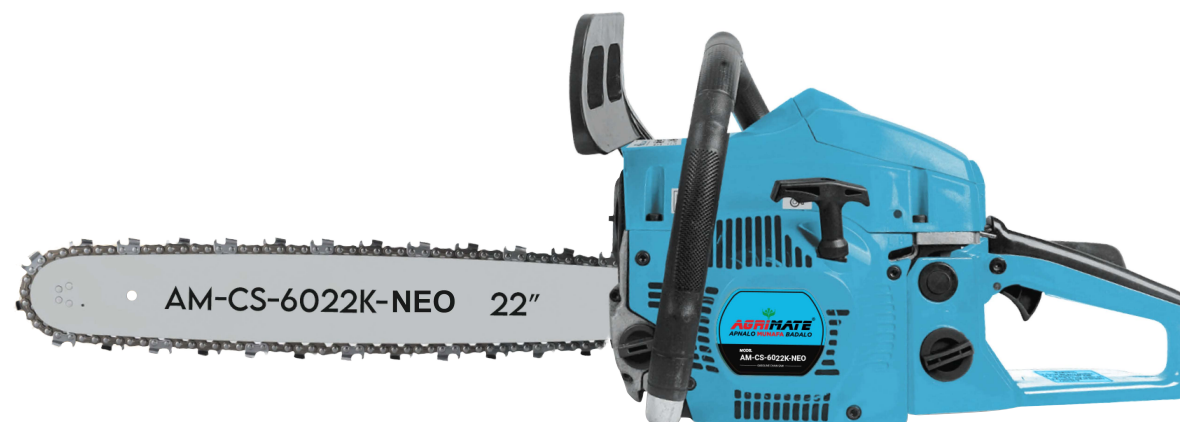


AN ISO 9001 : 2015 CERTIFIED COMPANY

TECHNICAL SPECIFICATION

MODEL	AM-CS-6022K-NEO	AM-CS-6022K-PRO
Displacement	60CC	60CC
Power	2.4kw	2.4kw
Fuel Tank Capacity	550ml	550ml
Guide Bar Size	22"	22"
Chain pitch	0.325	0.325

ENGINE DIAGRAM & SPARE PARTS LIST OF CHAIN SAW

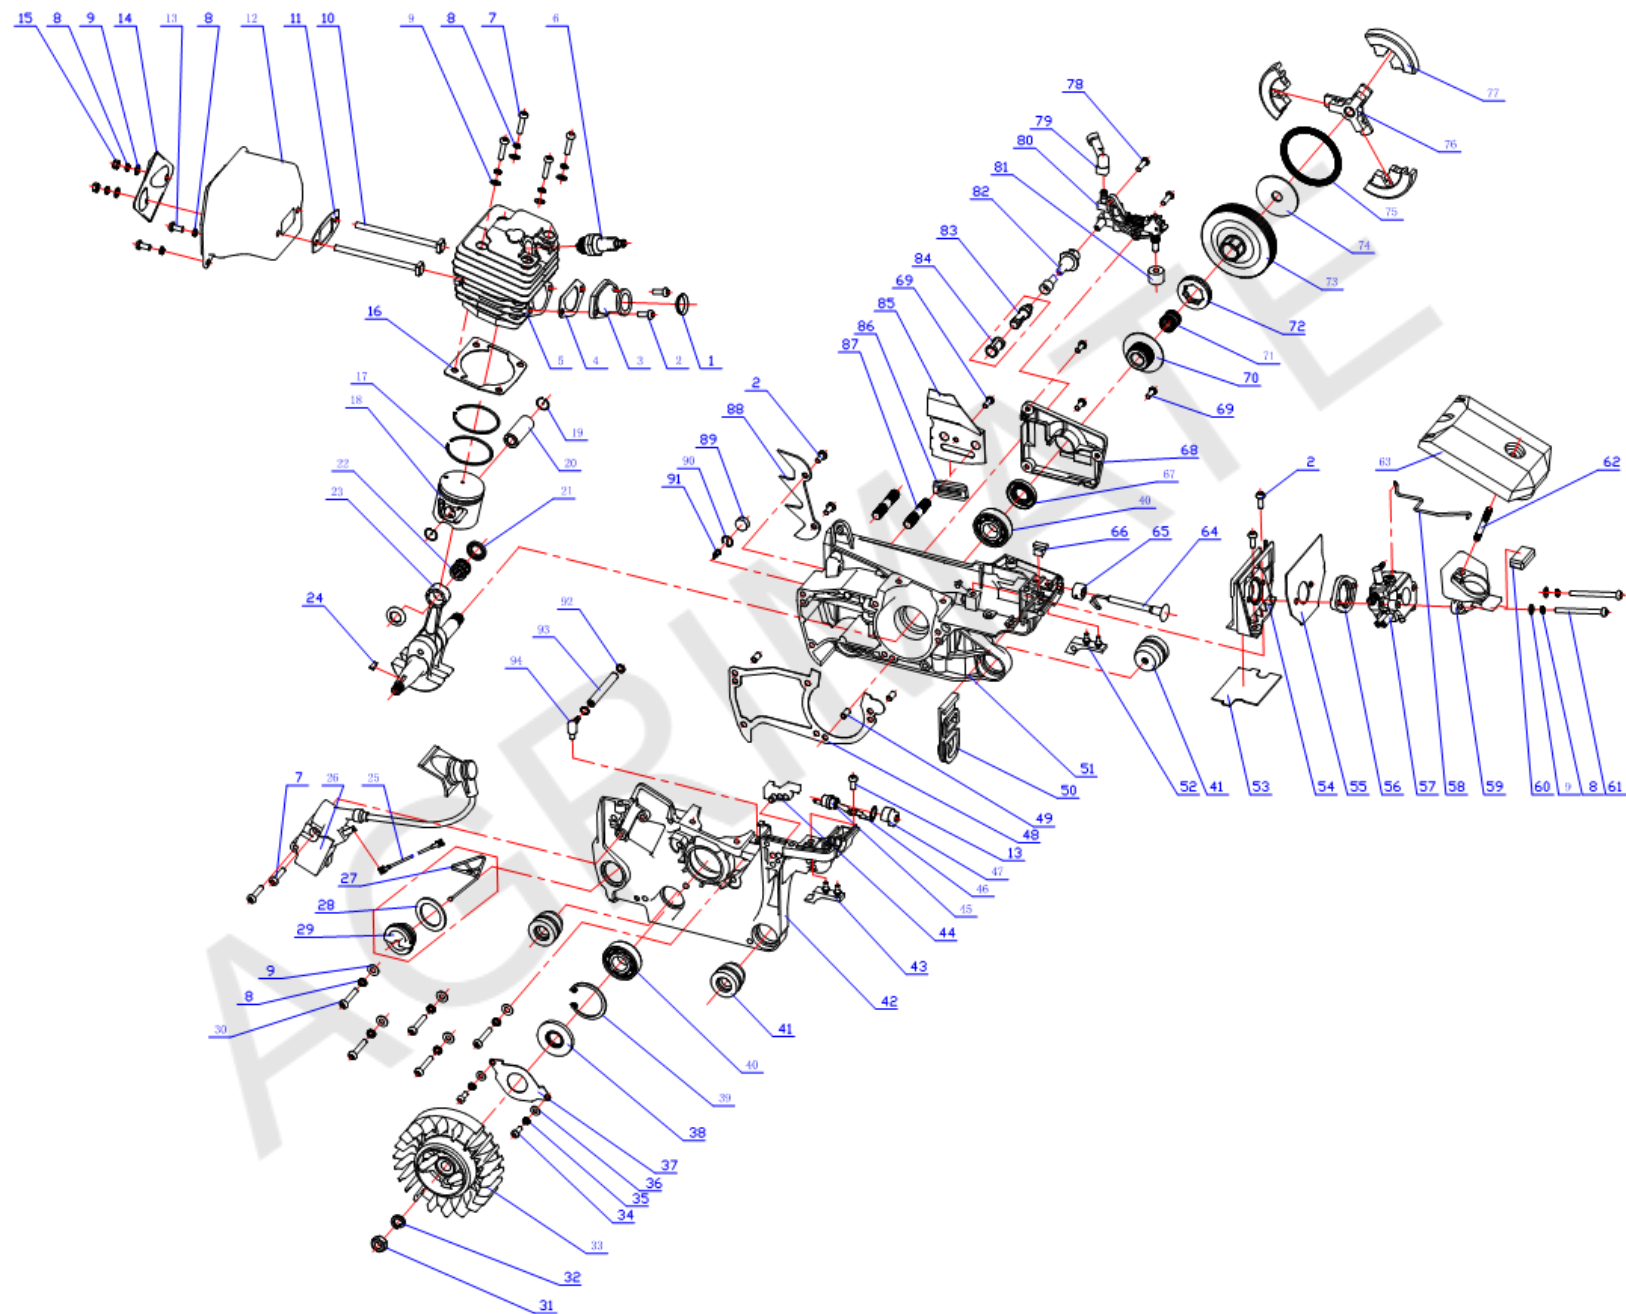


SL NO.	PART NO	DESCRIPTION	SL NO.	PART NO	DESCRIPTION
1	AM-CS-6022K- E01	Retainer Ring	17	AM-CS-6022K- E17	Piston Ring
2	AM-CS-6022K- E02	Screw	18	AM-CS-6022K- E18	Piston
3	AM-CS-6022K- E03	Air Intake Tube	19	AM-CS-6022K- E19	Piston Pin Circlip
4	AM-CS-6022K- E04	Air Intake Tube Gasket	20	AM-CS-6022K- E20	Piston Pin
5	AM-CS-6022K- E05	Cylinder	21	AM-CS-6022K- E21	Needle Bearing Ring
6	AM-CS-6022K- E06	Spark Plug	22	AM-CS-6022K- E22	Needle Bearing
7	AM-CS-6022K- E07	Screw	23	AM-CS-6022K- E23	Crankshaft Components
8	AM-CS-6022K- E08	Spring Washer	24	AM-CS-6022K- E24	Semicircular Key
9	AM-CS-6022K- E09	Washer	25	AM-CS-6022K- E25	Flameout Wire
10	AM-CS-6022K- E10	Silencer Bolt	26	AM-CS-6022K- E26	Igniter
11	AM-CS-6022K- E11	Silencer Gasket	27	AM-CS-6022K- E27	Oil Cap Retainer
12	AM-CS-6022K- E12	Silencer	28	AM-CS-6022K- E28	Packing Washer
13	AM-CS-6022K- E13	Screw	29	AM-CS-6022K- E29	Oil Cap
14	AM-CS-6022K- E14	Silencer Cap	30	AM-CS-6022K- E30	Screw
15	AM-CS-6022K- E15	Nut	31	AM-CS-6022K- E31	Nut
16	AM-CS-6022K- E16	Cylinder Gasket	32	AM-CS-6022K- E32	Spring Washer

SL NO.	PART NO	DESCRIPTION	SL NO.	PART NO	DESCRIPTION
33	AM-CS-6022K- E33	Flywheel	49	AM-CS-6022K- E49	Pin
34	AM-CS-6022K- E34	Screw	50	AM-CS-6022K- E50	Dust Plate
35	AM-CS-6022K- E35	Spring Washer	51	AM-CS-6022K- E51	Right Crankshaftcase
36	AM-CS-6022K- E36	Washer	52	AM-CS-6022K- E52	Right Anti-Shock Block
37	AM-CS-6022K- E37	Oil Seal Protector	53	AM-CS-6022K- E53	Backing Board
38	AM-CS-6022K- E38	Oil Seal	54	AM-CS-6022K- E54	Air Intake Tube Support
39	AM-CS-6022K- E39	Ring	55	AM-CS-6022K- E55	Air Intake Tube Support Gasket
40	AM-CS-6022K- E40	Bearing	56	AM-CS-6022K- E56	Air Intake Flange
41	AM-CS-6022K- E41	Anti-Vibration Cushion D	57	AM-CS-6022K- E57	Carburetor
42	AM-CS-6022K- E42	Left Crankshaftcase	58	AM-CS-6022K- E58	Accelerator Rod
43	AM-CS-6022K- E43	Left Anti-Shock Block	59	AM-CS-6022K- E59	Air Intake
44	AM-CS-6022K- E44	Anti-Shock Block	60	AM-CS-6022K- E60	Air Intake Cushion
45	AM-CS-6022K- E45	Flameout Switch	61	AM-CS-6022K- E61	Screw
46	AM-CS-6022K- E46	Ground Strip	62	AM-CS-6022K- E62	Screw
47	AM-CS-6022K- E47	Flameout Switch Retainer	63	AM-CS-6022K- E63	Air Filter
48	AM-CS-6022K- E48	Crankshaftcase Gasket	64	AM-CS-6022K- E64	Throttle Rod

SL NO.	PART NO	DESCRIPTION	SL NO.	PART NO	DESCRIPTION
65	AM-CS-6022K- E65	Throttle Lever Retainer	81	AM-CS-6022K- E81	Sponge Ring
66	AM-CS-6022K- E66	Anti-Shock Block	82	AM-CS-6022K- E82	Oil Tube
67	AM-CS-6022K- E67	Oil Seal	83	AM-CS-6022K- E83	Oil Filter Body
68	AM-CS-6022K- E68	Oil Pump Cover Plate	84	AM-CS-6022K- E84	Oil Filter Sereen
69	AM-CS-6022K- E69	Screw	85	AM-CS-6022K- E85	Protecting Shield
70	AM-CS-6022K- E70	Worm	86	AM-CS-6022K- E86	Chain Guide
71	AM-CS-6022K- E71	Needle Bearing	87	AM-CS-6022K- E87	Screw
72	AM-CS-6022K- E72	Sprocket	88	AM-CS-6022K- E88	Spiked Bumper
73	AM-CS-6022K- E73	Clutch Shell	89	AM-CS-6022K- E89	Sponge Block
74	AM-CS-6022K- E74	Clutch Washer	90	AM-CS-6022K- E90	Aeration Nozzle Circlip
75	AM-CS-6022K- E75	Clutch Extension Spring	91	AM-CS-6022K- E91	Aeration Nozzle
76	AM-CS-6022K- E76	Retainer	92	AM-CS-6022K- E92	Suction Tube Circlip
77	AM-CS-6022K- E77	Shoe Bolck	93	AM-CS-6022K- E93	Suction Tube
78	AM-CS-6022K- E78	Screw	94	AM-CS-6022K- E94	Suction Nozzle
79	AM-CS-6022K- E79	Oil Nozzle			
80	AM-CS-6022K- E80	Oil Pump			

TRANSMISSION DIAGRAM & SPARE PARTS LIST OF CHAIN SAW

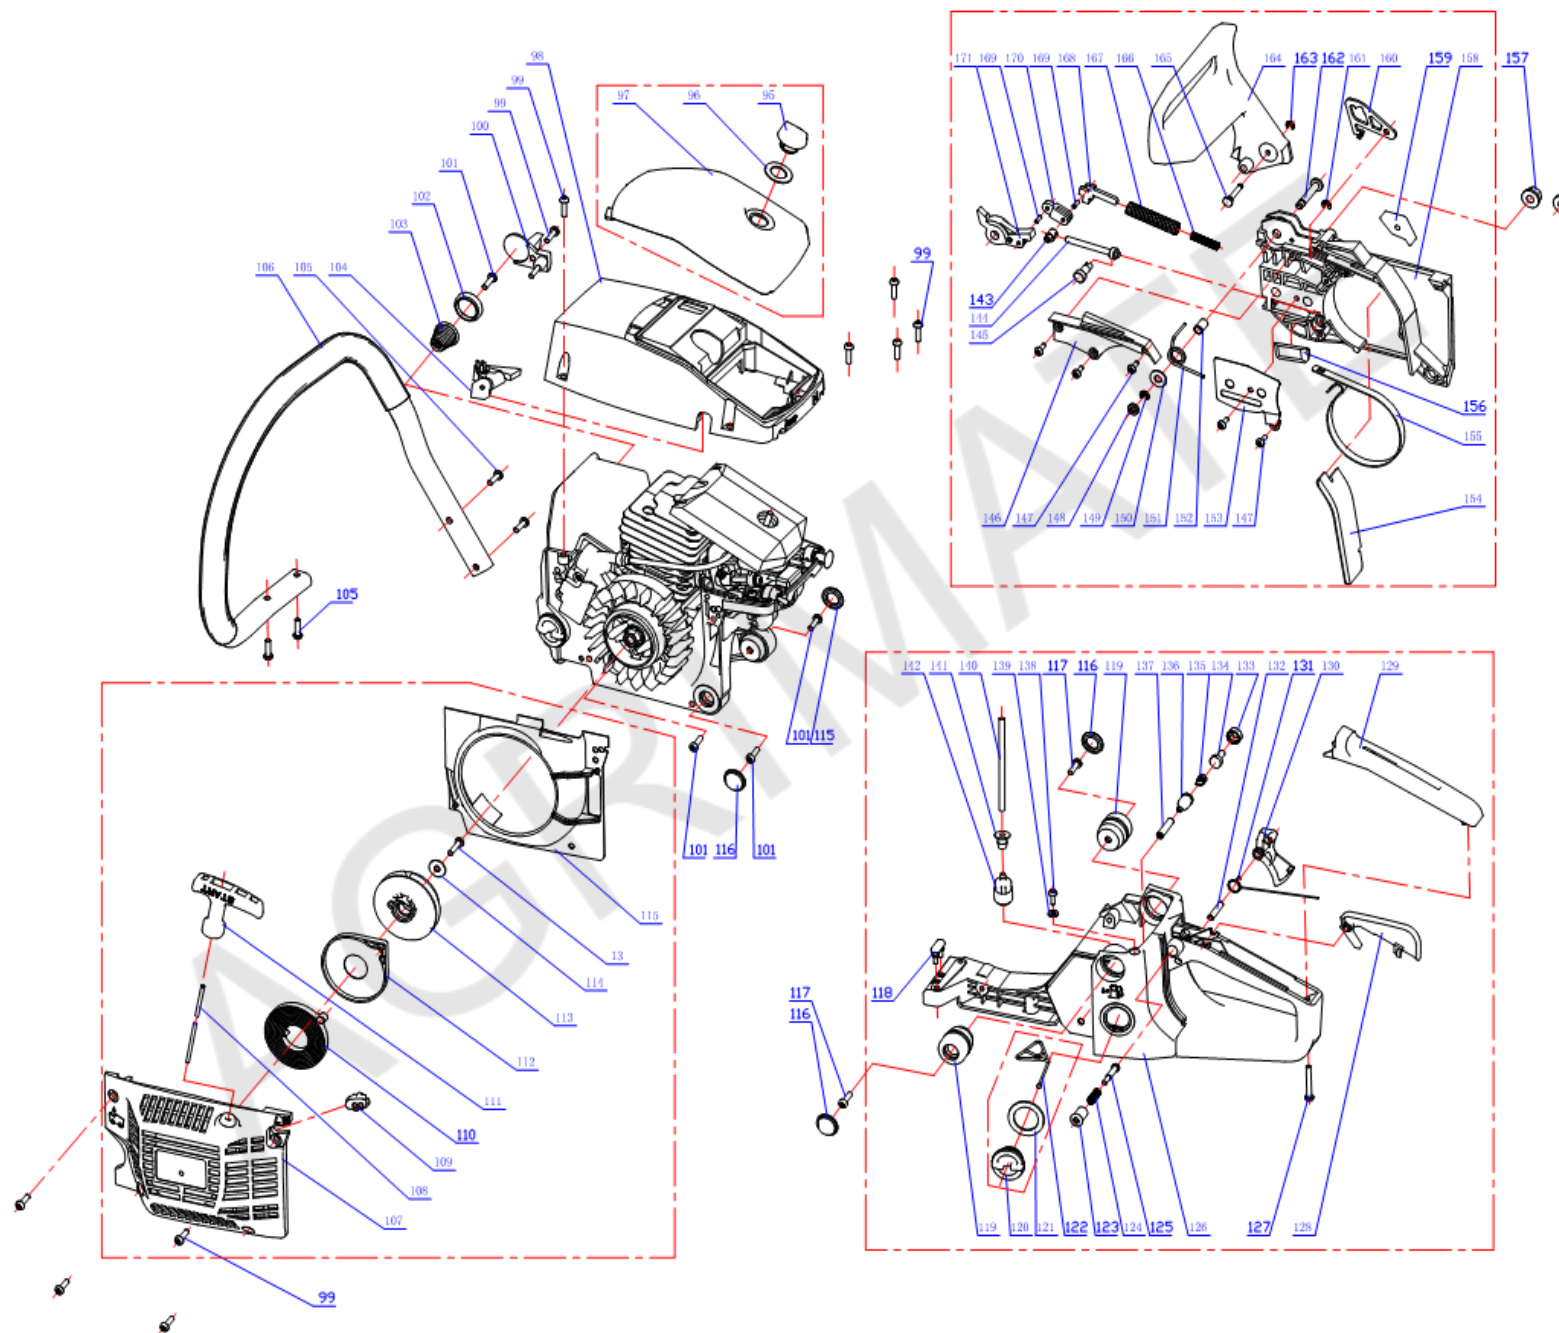

SL NO.	PART NO	DESCRIPTION	SL NO.	PART NO	DESCRIPTION
95	AM-CS-6022K- T95	Air Filter Lock Nut	111	AM-CS-6022K- T111	Starting Handle
96	AM-CS-6022K- T96	Lock Nut Washer	112	AM-CS-6022K- T112	Coil Spring Shell
97	AM-CS-6022K- T97	Air Filter Cover	113	AM-CS-6022K- T113	Starter Wheel
98	AM-CS-6022K- T98	Upper Cover Plate	114	AM-CS-6022K- T114	Big Washer
99	AM-CS-6022K- T99	Screw	115	AM-CS-6022K- T115	Cooling-Air Mask
100	AM-CS-6022K- T100	Chain Catcher	116	AM-CS-6022K- T116	Dust Cover
101	AM-CS-6022K- T101	Screw	117	AM-CS-6022K- T117	Screw
102	AM-CS-6022K- T102	Conical Spring Base	118	AM-CS-6022K- T118	Shock Nubber
103	AM-CS-6022K- T103	Conical Spreader Spring	119	AM-CS-6022K- T119	Anti-Vibration Cushion C
104	AM-CS-6022K- T104	Idle Adjusting Guide	120	AM-CS-6022K- T120	Fuel Cap
105	AM-CS-6022K- T105	Screw	121	AM-CS-6022K- T121	Packing Washer
106	AM-CS-6022K- T106	Front Handle Assembly	122	AM-CS-6022K- T122	Fuel Cap Retainer
107	AM-CS-6022K- T107	Starter Cover	123	AM-CS-6022K- T123	Button
108	AM-CS-6022K- T108	Start Rope	124	AM-CS-6022K- T124	Button Spring
109	AM-CS-6022K- T109	L H Sheathing	125	AM-CS-6022K- T125	Button Shaft
110	AM-CS-6022K- T110	Coil spring	126	AM-CS-6022K- T126	Base

SL NO.	PART NO	DESCRIPTION	SL NO.	PART NO	DESCRIPTION
127	AM-CS-6022K- T127	Screw	143	AM-CS-6022K- T143	Tightener
128	AM-CS-6022K- T128	Trigger Controller	144	AM-CS-6022K- T144	Tightening Screw
129	AM-CS-6022K- T129	Handle Cover	145	AM-CS-6022K- T145	Tightening Gear
130	AM-CS-6022K- T130	Trigger	146	AM-CS-6022K- T146	Brake Spring Cover
131	AM-CS-6022K- T131	Trigger Torsion Rod Spring	147	AM-CS-6022K- T147	Screw
132	AM-CS-6022K- T132	Pin	148	AM-CS-6022K- T148	Shock Rubber Washer
133	AM-CS-6022K- T133	Balancer Cover	149	AM-CS-6022K- T149	Shield Ring
134	AM-CS-6022K- T134	Filter	150	AM-CS-6022K- T150	Washer
135	AM-CS-6022K- T135	Balancer Rubber	151	AM-CS-6022K- T151	Brake Torsion Rod Spring
136	AM-CS-6022K- T136	Balancer Body	152	AM-CS-6022K- T152	Front Guard Tube
137	AM-CS-6022K- T137	Balancer Tube	153	AM-CS-6022K- T153	Tightener Cover
138	AM-CS-6022K- T138	Screw	154	AM-CS-6022K- T154	Dust Shield
139	AM-CS-6022K- T139	Sealing Rubber	155	AM-CS-6022K- T155	Brake Belt
140	AM-CS-6022K- T140	Fuel Tube	156	AM-CS-6022K- T156	Chain Guide
141	AM-CS-6022K- T141	Fuel Tube Base	157	AM-CS-6022K- T157	Nut
142	AM-CS-6022K- T142	Fuel Filter Components	158	AM-CS-6022K- T158	Right Cover

SL NO.	PART NO	DESCRIPTION	SL NO.	PART NO	DESCRIPTION
159	AM-CS-6022K- T159	Shock Rubber Cushion			
160	AM-CS-6022K- T160	Cam Piate			
161	AM-CS-6022K- T161	Shield Ring			
162	AM-CS-6022K- T162	Front Guard Pin			
163	AM-CS-6022K- T163	Shield Ring			
164	AM-CS-6022K- T164	Front Guard			
165	AM-CS-6022K- T165	Positioning Pin			
166	AM-CS-6022K- T166	Secondary Brake Spring			
167	AM-CS-6022K- T167	Brake Spring			
168	AM-CS-6022K- T168	Brake Control Rod			
169	AM-CS-6022K- T169	Pin			
170	AM-CS-6022K- T170	Secondary Pull-Rod			
171	AM-CS-6022K- T171	Main Pull-Rod			

INSPECTION & MAINTAINANCE

For safety use, make sure the machine is cleaned every three months. Before working, make sure to inspect the filter and the nozzle and ensure there is no impurity. After working, make sure there is no water in the pump and the hose.

If the machine needs to be repaired in the guarantee period, please return the machine to the shop. You need to provide the certificate of purchase on order to repair or get the substitute.

Before packing, the machine should be cleaned, then use closed packaging, packaging should be firm. Store the machine in dry place.

For transportation safety. The machine should comply with ISTA.

Do not dispose of electrical machines as unsorted municipal waste, use separate collection facilities.

If electrical machines are disposed of in landfills or dumps, hazardous substances can leak into the ground water and get into the food chain, damaging your health and well being.

When replacing old machines with new ones, the retailer is legally obligated to take back your old machine for disposals at least free of charge.

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.


WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

DOS & DONTs

1. Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
2. It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines
3. Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments
4. Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
5. Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment
6. Do not use the machine within range of persons unless they wear protective clothing
7. Do not operate the machine when fatigued or under the influence of alcohol or drugs
8. When the machine is running, please maintain a constant water supply. Without water circulation will damage the sealing rings of the machine.
9. For more query kindly contact for our Service Center/Dealer/ franchise

AGRIMATE MULTI PURPOSE EQUIPMENT ANYWHERE - ANYTIME - ANY CROP

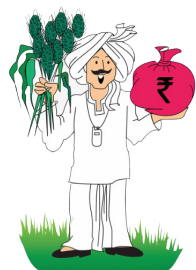

**ratnagiri[®]
impeX**

BRINGING YOU THE FUTURE... NOW

IMPORTED & MARKETING BY,
RATNAGIRI IMPEX PVT., LTD.,

**Annapurna House, #1 / 1G, 7th Cross, New
Guddadahalli Mysore Road, Bangalore - 560 026
Missed Call : 7393 938 938 Email: ask@agrimart.in**