



INTERCULTIVATOR / POWER WEEDER AM-MPTC-6600-6D

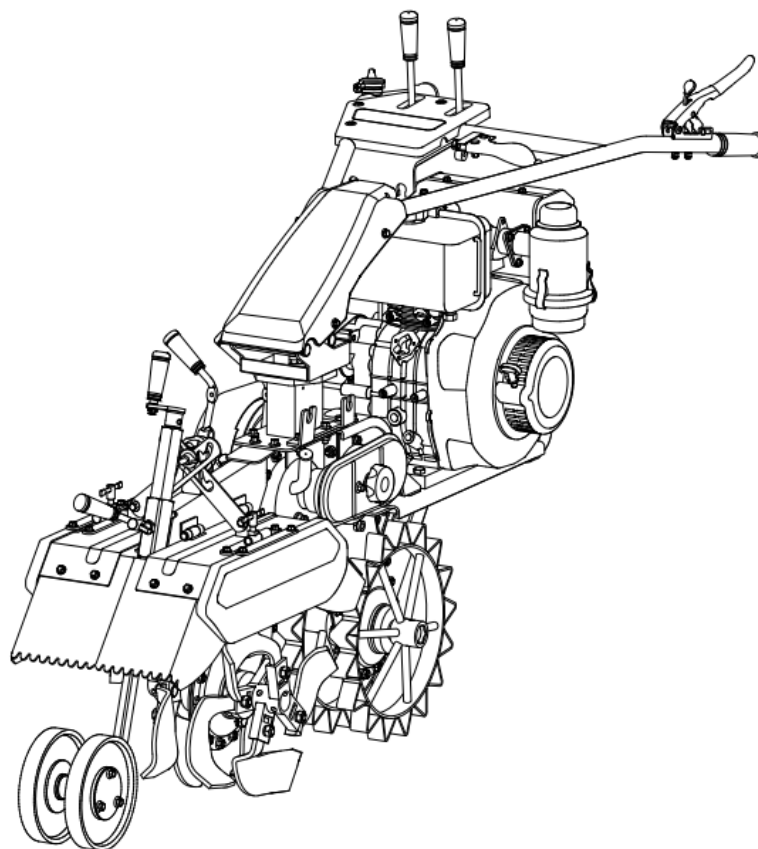

TECHNICAL SPECIFICATIONS

MODEL	AM-MPTC-6600-6D
ENGINE	AM-173FD
Power	4.4KW/ 6HP/ 3600RPM
Displacement	296CC
Fuel tank Capacity	3.5Ltr
Ditching Width	290mm
Ditching depth	>60mm
Cultivating Depth Min	100mm
Gear	2 Forward + 2 Reverse
Gear Box Oil	SA90
Engine Oil	20w40/ 15w40
Gear Box Oil Capacity	1.9Ltr.


Travel box parts - TA

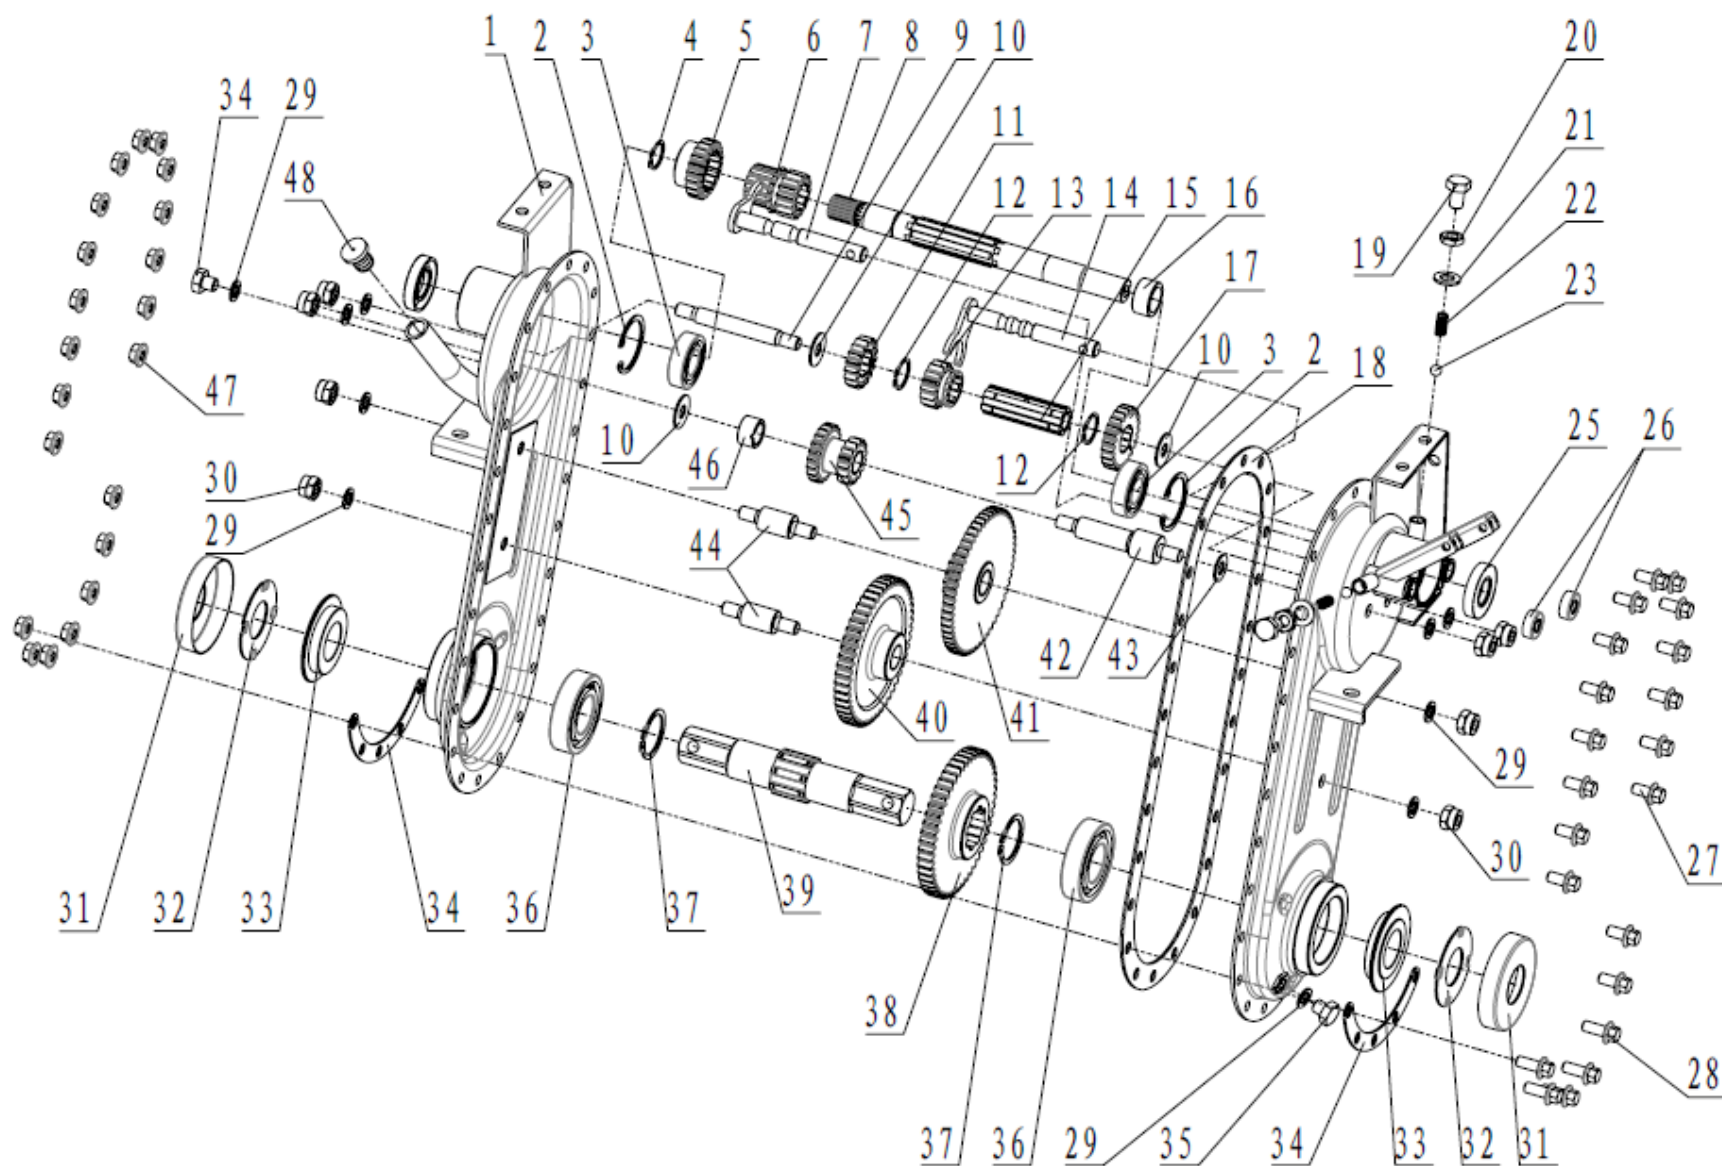

SL NO	PART NO	DESCRIPITON	SL NO	PART NO	DESCRIPITON
1	AM-MPTC-6600NT-6D-TA01	Walking box/right	13	AM-MPTC-6600NT-6D-TA13	Walking countershaft drive teeth
2	AM-MPTC-6600NT-6D-TA02	Hole with elastic ring	14	AM-MPTC-6600NT-6D-TA14	Walking box reversing fork
3	AM-MPTC-6600NT-6D-TA03	Deep groove ball bearing	15	AM-MPTC-6600NT-6D-TA15	Walking countershaft spline sleeve assy
4	AM-MPTC-6600NT-6D-TA04	Elastic retaining ring for shaft	16	AM-MPTC-6600NT-6D-TA16	Bush
5	AM-MPTC-6600NT-6D-TA05	Travel box fast gear drive teeth	17	AM-MPTC-6600NT-6D-TA17	Walking countershaft slow gear
6	AM-MPTC-6600NT-6D-TA06	Travel box slow gear drive teeth	18	AM-MPTC-6600NT-6D-TA18	Packing gasket
7	AM-MPTC-6600NT-6D-TA07	Travel box shift fork	19	AM-MPTC-6600NT-6D-TA19	Hexagon head bolt
8	AM-MPTC-6600NT-6D-TA08	Travelling box spindle	20	AM-MPTC-6600NT-6D-TA20	Thin hexagon nut
9	AM-MPTC-6600NT-6D-TA09	Walking countershaft	21	AM-MPTC-6600NT-6D-TA21	Flat washer
10	AM-MPTC-6600NT-6D-TA10	Non-standard flat washer	22	AM-MPTC-6600NT-6D-TA22	Gear pressure spring
11	AM-MPTC-6600NT-6D-TA11	Walking countershaft quick gear	23	AM-MPTC-6600NT-6D-TA23	A steel ball
12	AM-MPTC-6600NT-6D-TA12	Shaft with elastic retaining ring	24	AM-MPTC-6600NT-6D-TA24	Walking box/left

SL NO	PART NO	DESCRIPITON	SL NO	PART NO	DESCRIPITON
25	AM-MPTC-6600NT-6D-TA25	Non-standard oil seal	37	AM-MPTC-6600NT-6D-TA37	Shaft with elastic retainer
26	AM-MPTC-6600NT-6D-TA26	Shifting fork shaft oil seal	38	AM-MPTC-6600NT-6D-TA38	Travel box output shaft gear
27	AM-MPTC-6600NT-6D-TA27	Hexagonal flange bolt	39	AM-MPTC-6600NT-6D-TA39	Walking box output shaft
28	AM-MPTC-6600NT-6D-TA28	Hexagon flange bolt	40	AM-MPTC-6600NT-6D-TA40	Gear group
29	AM-MPTC-6600NT-6D-TA29	Gasket	41	AM-MPTC-6600NT-6D-TA41	Double transmission gear assembly
30	AM-MPTC-6600NT-6D-TA30	Type 1 non-metal insert hexagon lock nut	42	AM-MPTC-6600NT-6D-TA42	Reverse gear shaft
31	AM-MPTC-6600NT-6D-TA31	Output shaft guard cover	43	AM-MPTC-6600NT-6D-TA43	Non-standard flat washer
32	AM-MPTC-6600NT-6D-TA32	Output shaft oil seal block	44	AM-MPTC-6600NT-6D-TA44	countershaft
33	AM-MPTC-6600NT-6D-TA33	Non-standard oil seal	45	AM-MPTC-6600NT-6D-TA45	Reverse gear double gear assembly
34	AM-MPTC-6600NT-6D-TA34	Curved stiffener	46	AM-MPTC-6600NT-6D-TA46	Bush
35	AM-MPTC-6600NT-6D-TA35	Hexagon head bolt	47	AM-MPTC-6600NT-6D-TA47	Hexagon flange nut
36	AM-MPTC-6600NT-6D-TA36	Deep groove ball bearing	48	AM-MPTC-6600NT-6D-TA48	Oiled rubber plug


Tillage box parts - TB A

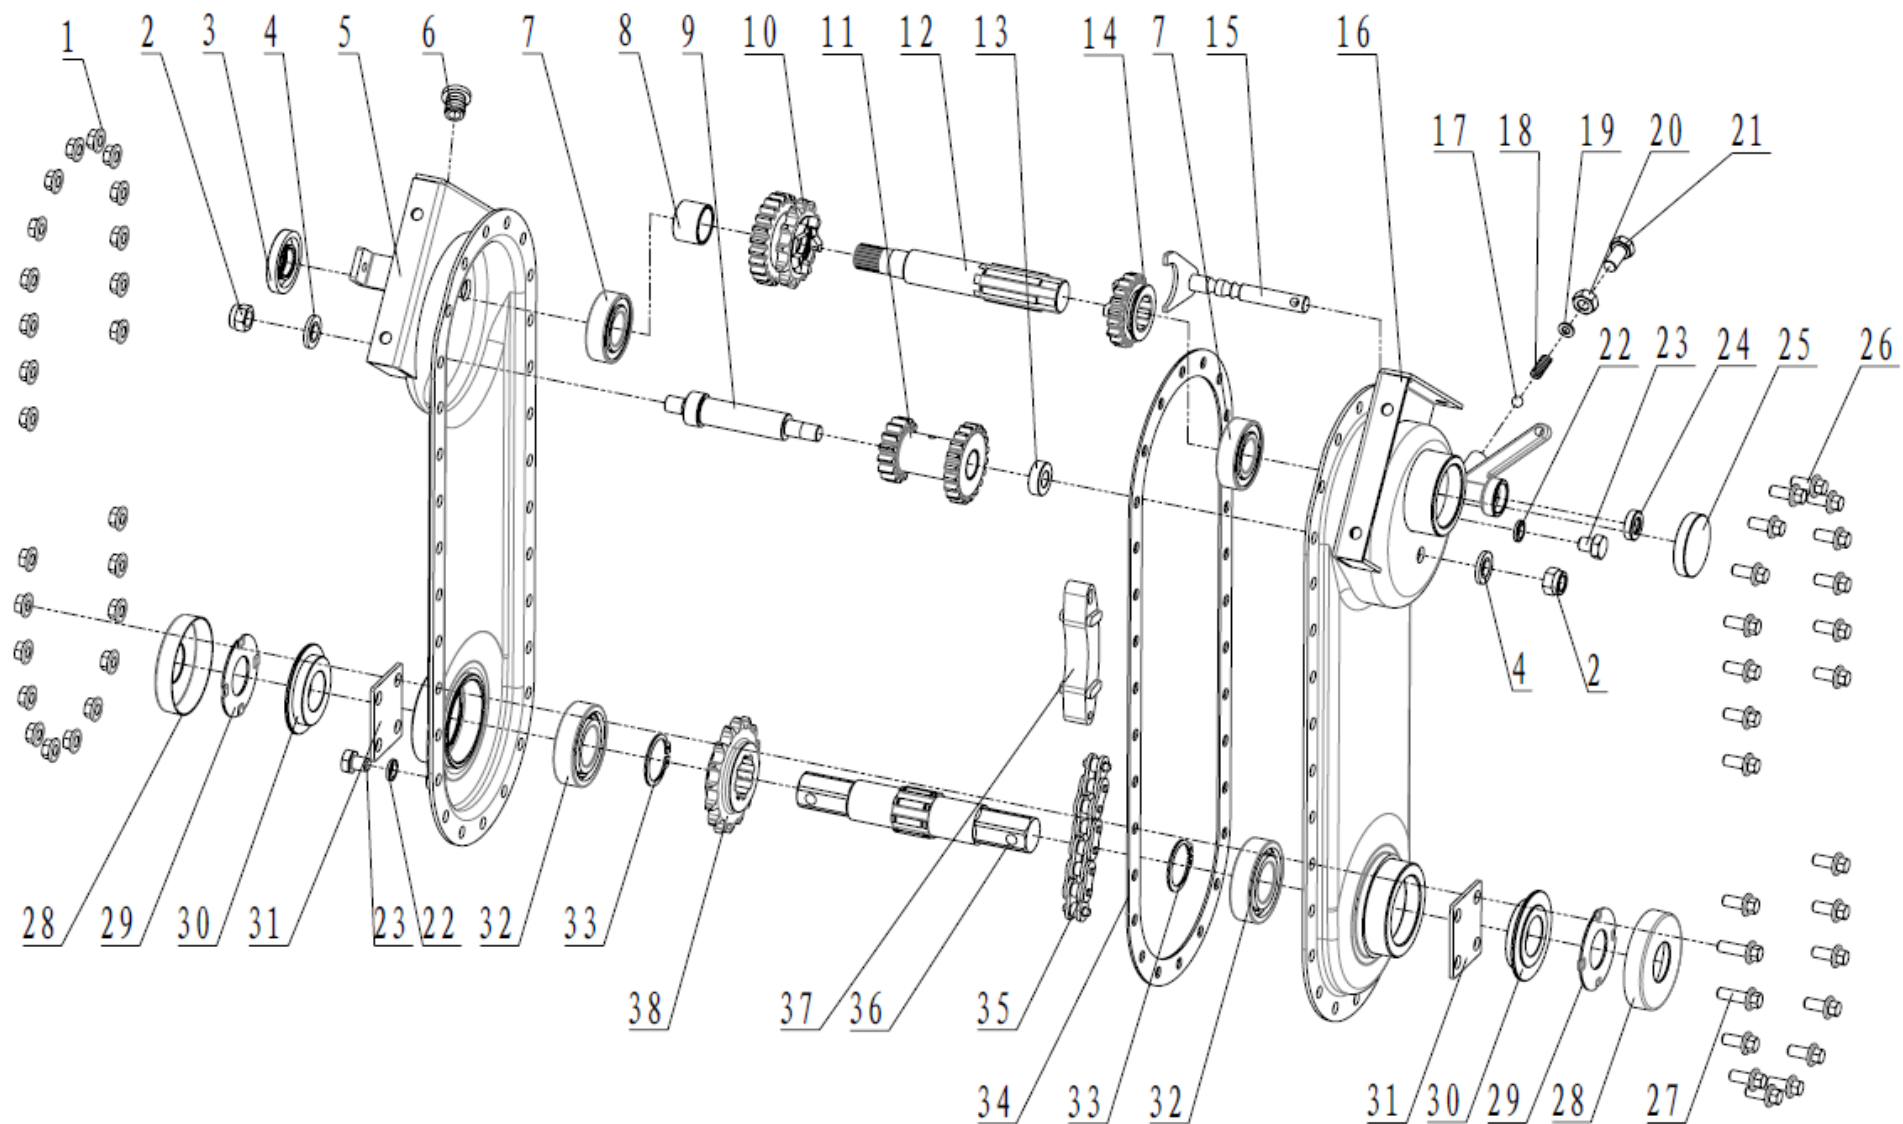

SL NO	PART NO	DESCRIPITON	SL NO	PART NO	DESCRIPITON
1	AM-MPTC-6600NT-6D-TB01	Hexagon flange nut	13	AM-MPTC-6600NT-6D-TB13	Bush
2	AM-MPTC-6600NT-6D-TB02	Hexagon Lock Nut	14	AM-MPTC-6600NT-6D-TB14	Tiller box shift teeth
3	AM-MPTC-6600NT-6D-TB03	Non-standard oil seal	15	AM-MPTC-6600NT-6D-TB15	Tiller box shift fork
4	AM-MPTC-6600NT-6D-TB04	Gasket	16	AM-MPTC-6600NT-6D-TB16	Tilling box/left
5	AM-MPTC-6600NT-6D-TB05	Tilling box/right	17	AM-MPTC-6600NT-6D-TB17	A steel ball
6	AM-MPTC-6600NT-6D-TB06	Oiled rubber plug	18	AM-MPTC-6600NT-6D-TB18	Gear pressure spring
7	AM-MPTC-6600NT-6D-TB07	Deep groove ball bearing	19	AM-MPTC-6600NT-6D-TB19	Flat washer
8	AM-MPTC-6600NT-6D-TB08	Bushing	20	AM-MPTC-6600NT-6D-TB20	Type 1 hexagon nut
9	AM-MPTC-6600NT-6D-TB09	Tiller box drive shaft	21	AM-MPTC-6600NT-6D-TB21	Hexagon head bolt
10	AM-MPTC-6600NT-6D-TB10	Plow box drive sprocket	22	AM-MPTC-6600NT-6D-TB22	Gasket
11	AM-MPTC-6600NT-6D-TB11	Tiller box slow gear double gear assembly	23	AM-MPTC-6600NT-6D-TB23	Hexagon head bolt
12	AM-MPTC-6600NT-6D-TB12	Tiller box input shaft	24	AM-MPTC-6600NT-6D-TB24	Non-standard oil seal


SL NO	PART NO	DESCRIPITON	SL NO	PART NO	DESCRIPITON
1	AM-MPTC-6600NT-6D-TB25	Oil seal cover	8	AM-MPTC-6600NT-6D-TB32	Deep groove ball bearing
2	AM-MPTC-6600NT-6D-TB26	Hexagonal flange bolt	14	AM-MPTC-6600NT-6D-TB33	Shaft with elastic retainer
3	AM-MPTC-6600NT-6D-TB27	Hexagonal flange bolt	15	AM-MPTC-6600NT-6D-TB34	Tiller box closing paper mat
4	AM-MPTC-6600NT-6D-TB28	Output shaft protection cover	16	AM-MPTC-6600NT-6D-TB35	Chain
5	AM-MPTC-6600NT-6D-TB29	Output shaft oil seal block	17	AM-MPTC-6600NT-6D-TB36	Walking box output shaft
6	AM-MPTC-6600NT-6D-TB30	Non-standard oil seal	18	AM-MPTC-6600NT-6D-TB37	Cultivator chain tension block
7	AM-MPTC-6600NT-6D-TB31	Ground breaking shovel fixed plate	19	AM-MPTC-6600NT-6D-TB38	Tiller box driven sprocket

Cultivation box, walking box combined box - TC

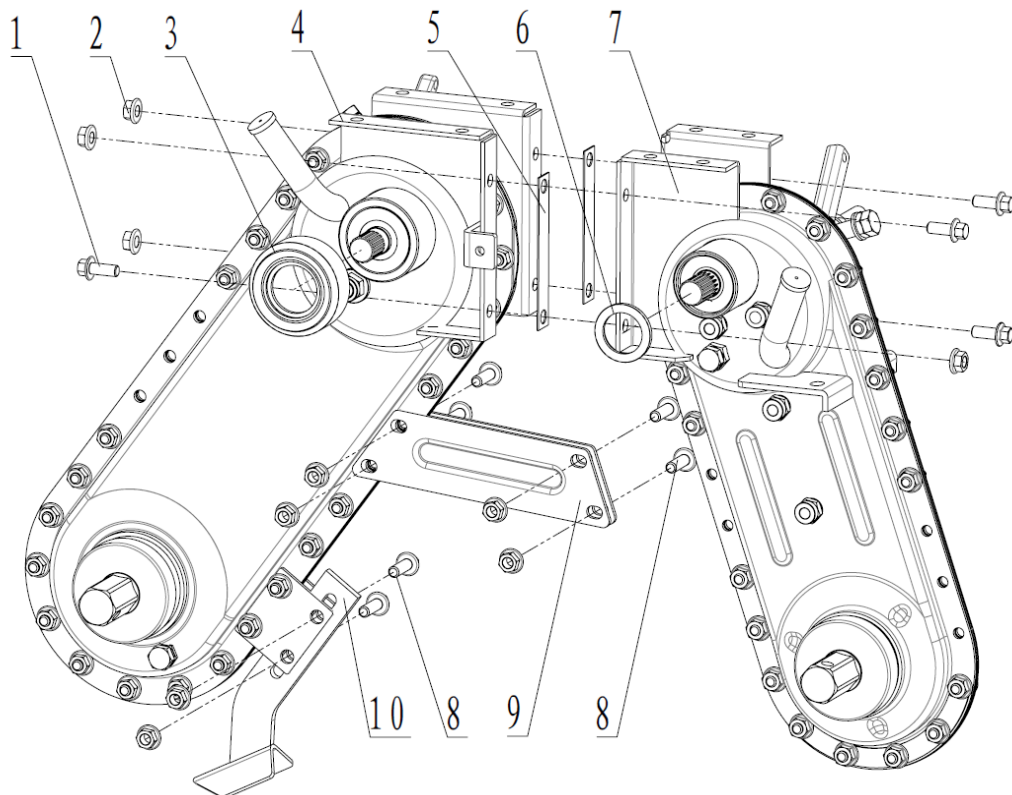

SL NO	PART NO	DESCRIPITON
1	AM-MPTC-6600NT-6D-TC01	Hexagon flange bolt
2	AM-MPTC-6600NT-6D-TC02	Hexagon flange nut
3	AM-MPTC-6600NT-6D-TC03	Seal cover
4	AM-MPTC-6600NT-6D-TC04	Tiller box assy
5	AM-MPTC-6600NT-6D-TC05	Backing block
6	AM-MPTC-6600NT-6D-TC06	Chain box seal ring
7	AM-MPTC-6600NT-6D-TC07	Travelling box assembly
8	AM-MPTC-6600NT-6D-TC08	Hexagonal flange bolt
9	AM-MPTC-6600NT-6D-TC09	Housing connecting plate
10	AM-MPTC-6600NT-6D-TC10	Breaker blade


Armrest control parts - TD

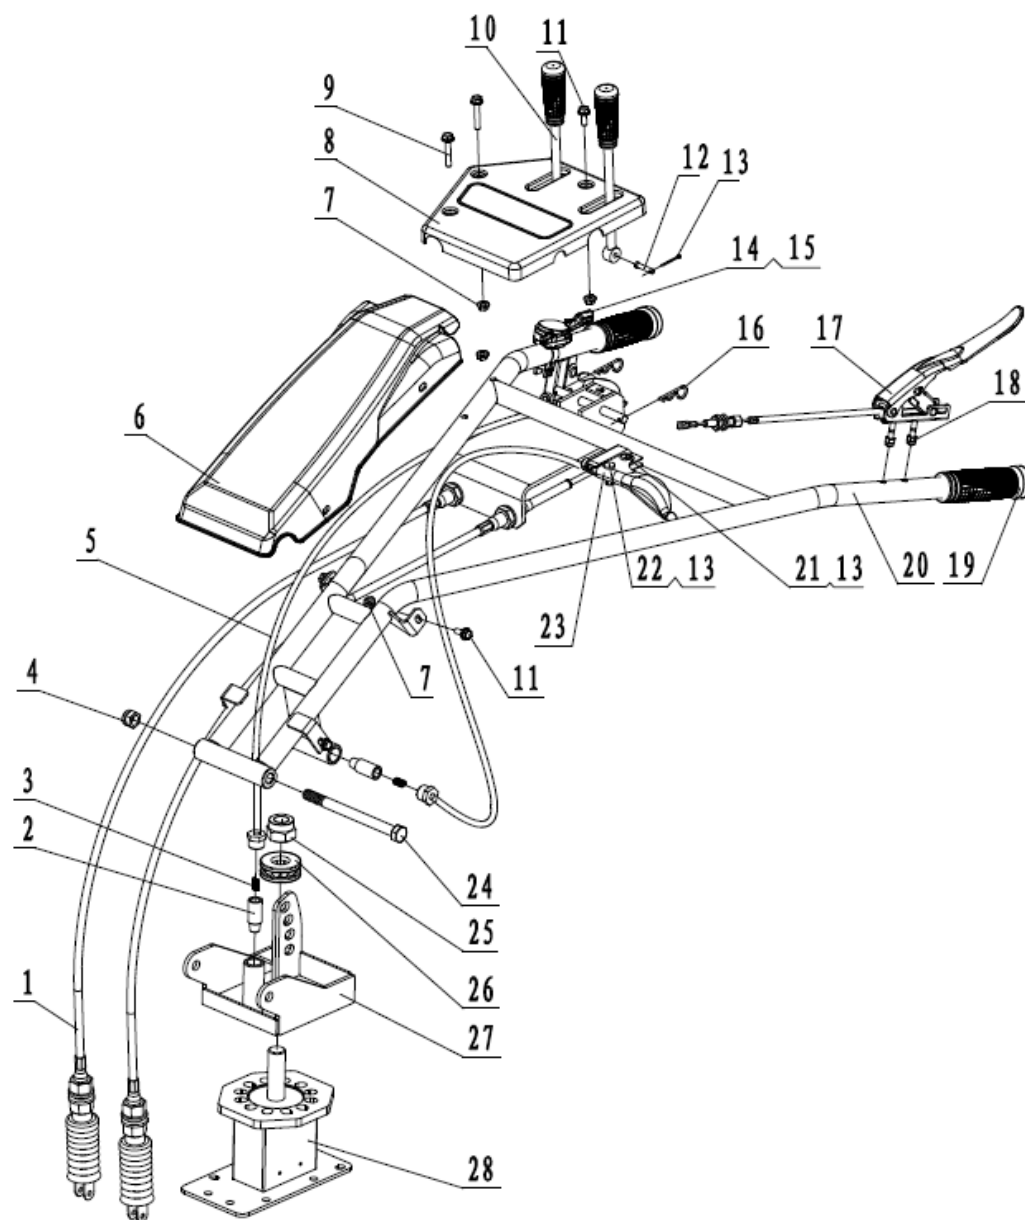

SL NO	PART NO	DESCRIPITON	SL NO	PART NO	DESCRIPITON
1	AM-MPTC-6600NT-6D-TD01	Flexible shaft shift cable	13	AM-MPTC-6600NT-6D-TD13	Cotter pin
2	AM-MPTC-6600NT-6D-TD02	Steering dowel	14	AM-MPTC-6600NT-6D-TD14	Flameout throttle switch combination
3	AM-MPTC-6600NT-6D-TD03	Turn the regulating spring	15	AM-MPTC-6600NT-6D-TD15	Throttle cable
4	AM-MPTC-6600NT-6D-TD04	Type 1 non-metal insert hexagon lock nut	16	AM-MPTC-6600NT-6D-TD16	Circlip B
5	AM-MPTC-6600NT-6D-TD05	Handrail adjusting cable	17	AM-MPTC-6600NT-6D-TD17	Sheet metal labor-saving handle assembly
6	AM-MPTC-6600NT-6D-TD06	Armrest cover	18	AM-MPTC-6600NT-6D-TD18	Type 1 non-metal insert hexagon lock nut
7	AM-MPTC-6600NT-6D-TD07	Hexagon flange nut	19	AM-MPTC-6600NT-6D-TD19	Shock absorbing grip
8	AM-MPTC-6600NT-6D-TD08	Armrest cover	20	AM-MPTC-6600NT-6D-TD20	Armrest bracket
9	AM-MPTC-6600NT-6D-TD09	Hexagon flange bolts	21	AM-MPTC-6600NT-6D-TD21	Non-standard pin shaft
10	AM-MPTC-6600NT-6D-TD10	Shift control grip/arc style	22	AM-MPTC-6600NT-6D-TD22	Non-standard pin shaft
11	AM-MPTC-6600NT-6D-TD11	Hexagon flange bolts	23	AM-MPTC-6600NT-6D-TD23	Reverse gear clutch handle
12	AM-MPTC-6600NT-6D-TD12	Pin shaft	24	AM-MPTC-6600NT-6D-TD24	Hexagon head bolt


SL NO	PART NO	DESCRIPITON	SL NO	PART NO	DESCRIPITON
1	AM-MPTC-6600NT-6D-TD01	Flexible shaft shift cable	15	AM-MPTC-6600NT-6D-TD15	Throttle cable
2	AM-MPTC-6600NT-6D-TD02	Steering dowel	16	AM-MPTC-6600NT-6D-TD16	Circlip B
3	AM-MPTC-6600NT-6D-TD03	Turn the regulating spring	17	AM-MPTC-6600NT-6D-TD17	Sheet metal labor-saving handle assembly
4	AM-MPTC-6600NT-6D-TD04	Type 1 non-metal insert hexagon lock nut	18	AM-MPTC-6600NT-6D-TD18	Type 1 non-metal insert hexagon lock nut
5	AM-MPTC-6600NT-6D-TD05	Handrail adjusting cable	19	AM-MPTC-6600NT-6D-TD19	Shock absorbing grip
6	AM-MPTC-6600NT-6D-TD06	Armrest cover	20	AM-MPTC-6600NT-6D-TD20	Armrest bracket
7	AM-MPTC-6600NT-6D-TD07	Hexagon flange nut	21	AM-MPTC-6600NT-6D-TD21	Non-standard pin shaft
8	AM-MPTC-6600NT-6D-TD08	Armrest cover	22	AM-MPTC-6600NT-6D-TD22	Non-standard pin shaft
9	AM-MPTC-6600NT-6D-TD09	Hexagon flange bolts	23	AM-MPTC-6600NT-6D-TD23	Reverse gear clutch handle
10	AM-MPTC-6600NT-6D-TD10	Shift control grip/arc style	24	AM-MPTC-6600NT-6D-TD24	Hexagon head bolt
11	AM-MPTC-6600NT-6D-TD11	Hexagon flange bolts	25	AM-MPTC-6600NT-6D-TD25	Type 1 non-metal insert hexagon lock nut
12	AM-MPTC-6600NT-6D-TD12	Pin shaft	26	AM-MPTC-6600NT-6D-TD26	Thrust ball bearing
13	AM-MPTC-6600NT-6D-TD13	Cotter pin	27	AM-MPTC-6600NT-6D-TD27	armrest
14	AM-MPTC-6600NT-6D-TD14	Flameout throttle switch combination	28	AM-MPTC-6600NT-6D-TD28	Armrest bracket

Chain Box Parts - TE

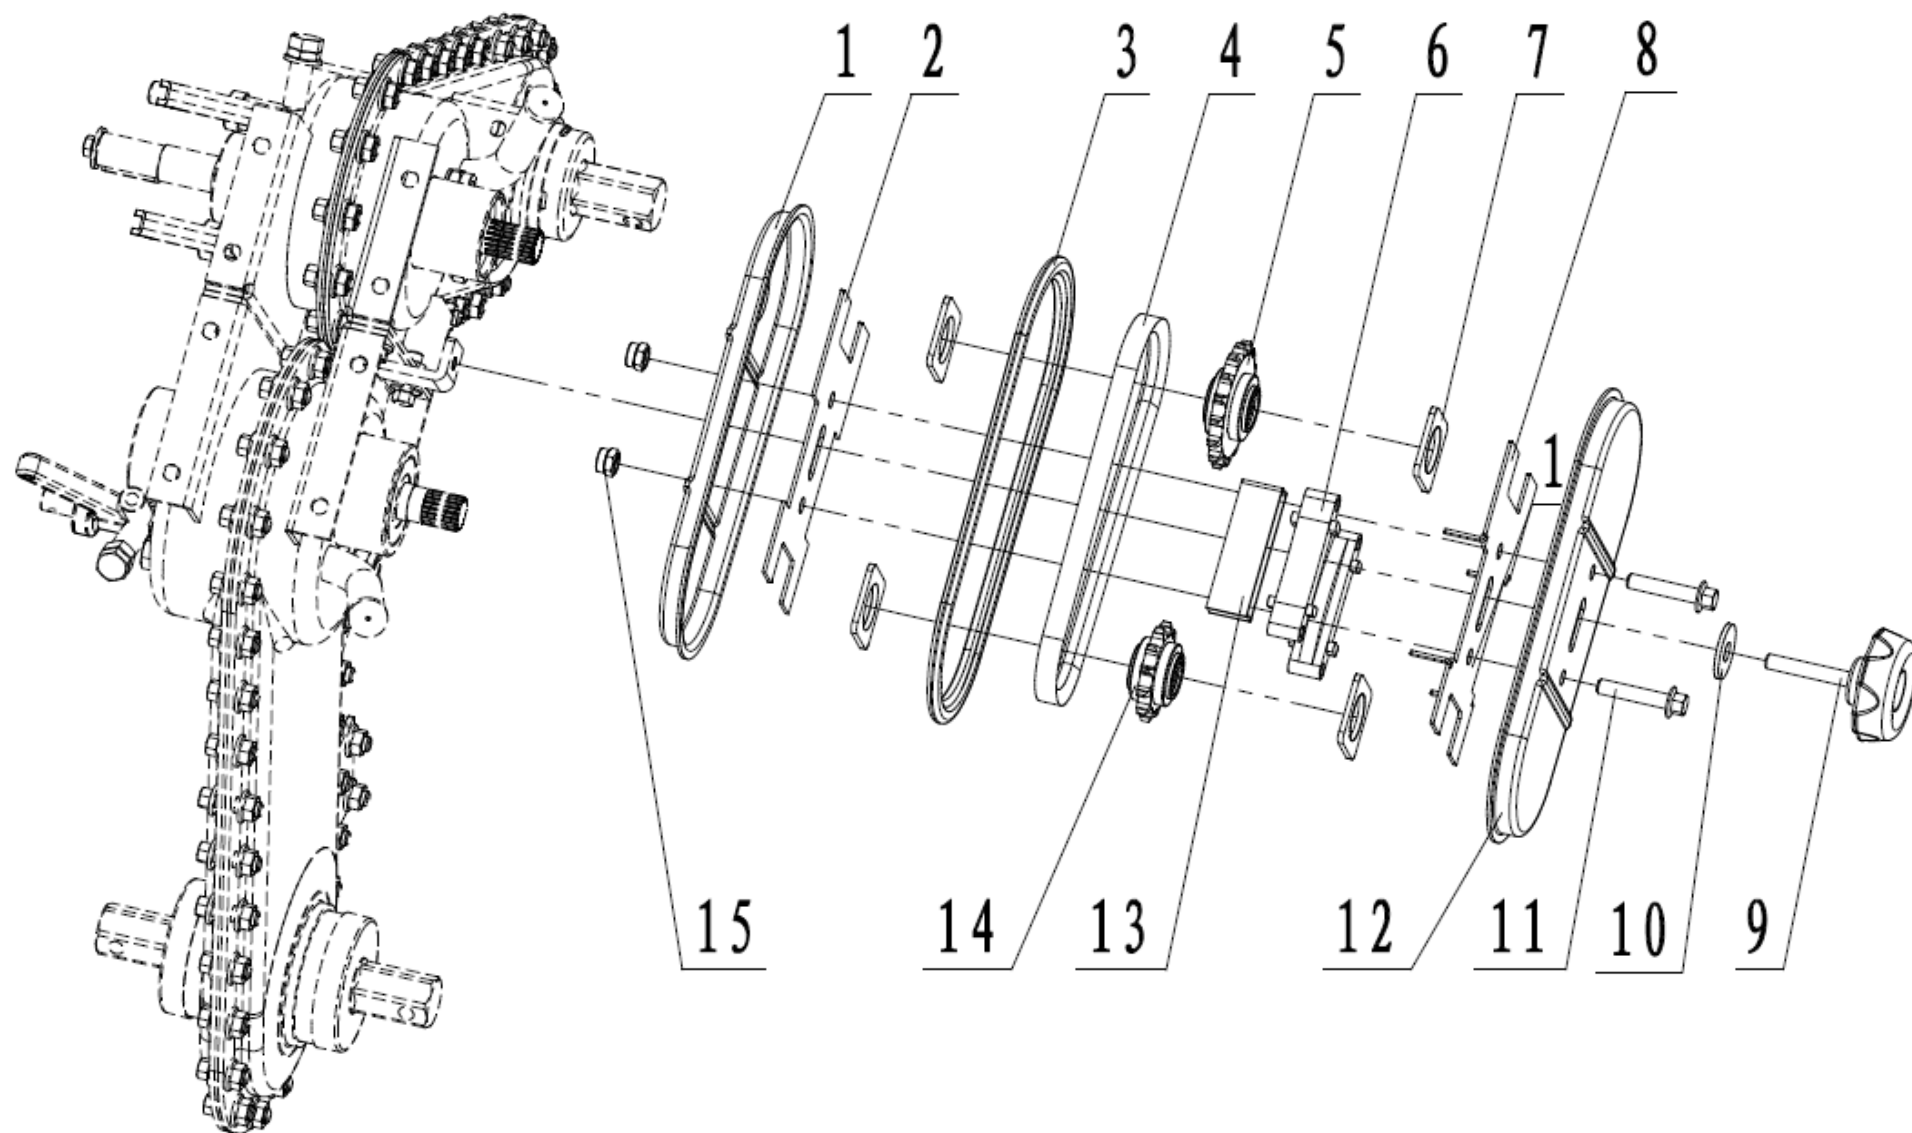


SL NO	PART NO	DESCRIPITON	SL NO	PART NO	DESCRIPITON
1	AM-MPTC-6600NT-6D-TE01	Chain box housing (inside)	9	AM-MPTC-6600NT-6D-TE09	Chain box locking handle
2	AM-MPTC-6600NT-6D-TE02	Support base plate/right	10	AM-MPTC-6600NT-6D-TE10	Large washer
3	AM-MPTC-6600NT-6D-TE03	Chain box rubber seal ring	11	AM-MPTC-6600NT-6D-TE11	Hexagonal flange bolt
4	AM-MPTC-6600NT-6D-TE04	Chain	12	AM-MPTC-6600NT-6D-TE12	Chain box housing (outside)
5	AM-MPTC-6600NT-6D-TE05	Chain box driven sprocket	13	AM-MPTC-6600NT-6D-TE13	Bolt support block
6	AM-MPTC-6600NT-6D-TE06	Chain box chain tension block	14	AM-MPTC-6600NT-6D-TE14	Chain box drive sprocket
7	AM-MPTC-6600NT-6D-TE07	Copper gasket	15	AM-MPTC-6600NT-6D-TE15	Type 1 non-metal insert hexa- gon lock nut
8	AM-MPTC-6600NT-6D-TE08	Support base plate/left			

FENDER PARTS - TF

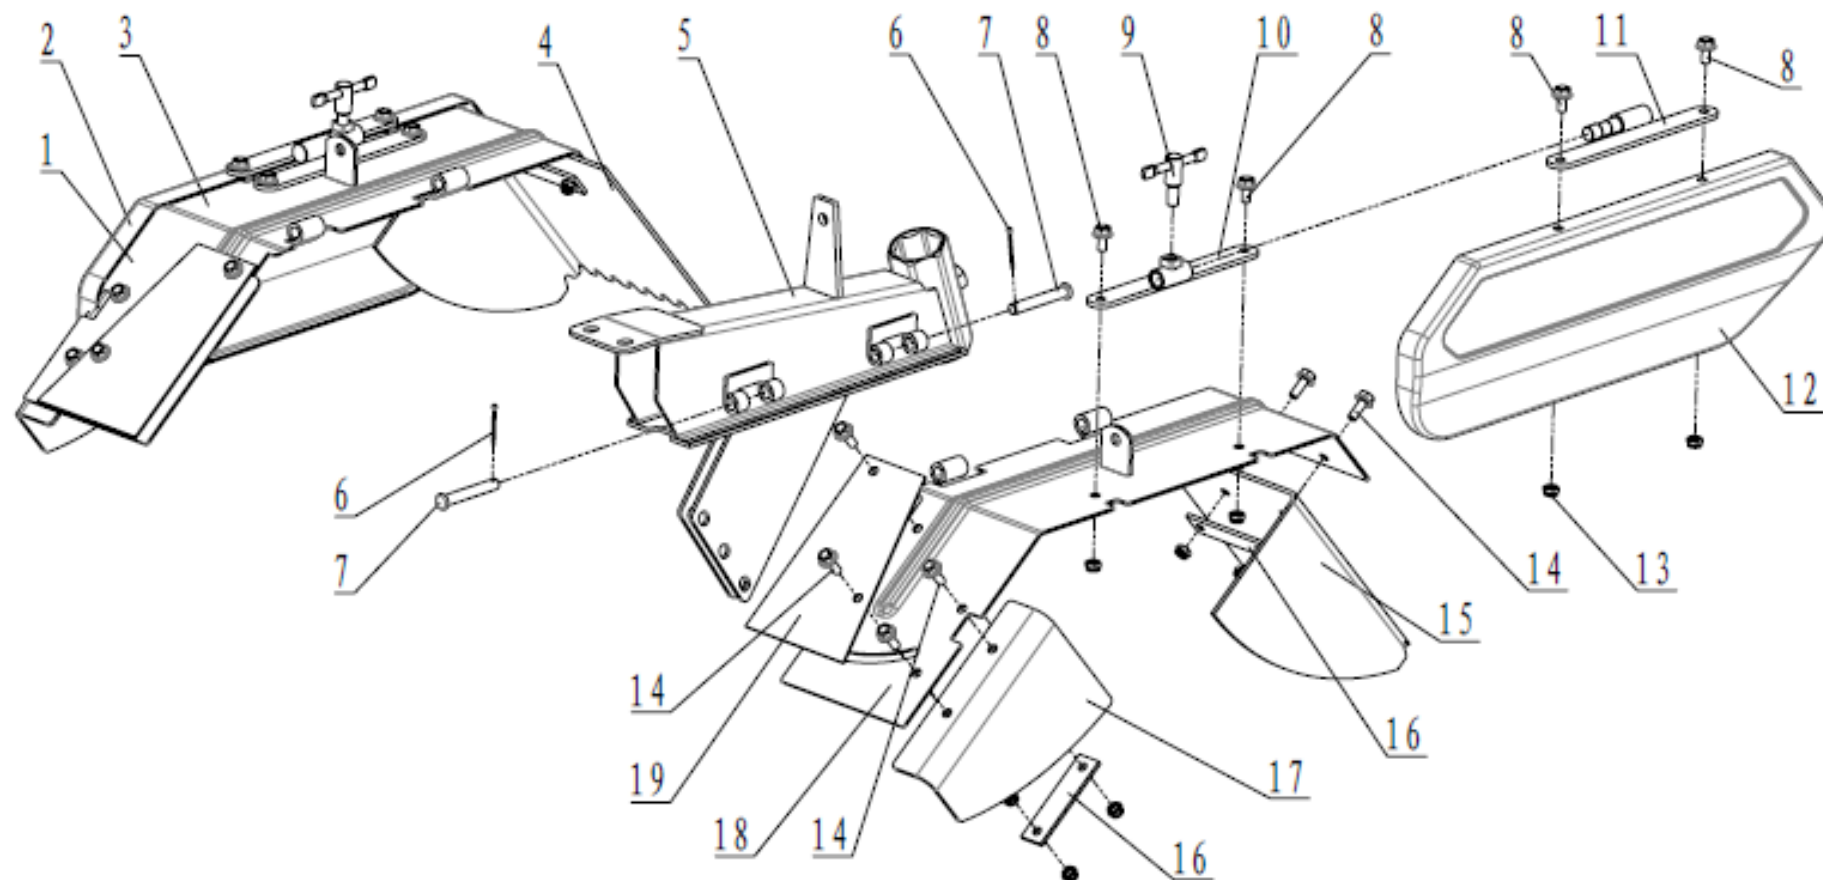


SL NO	PART NO	DESCRIPITON	SL NO	PART NO	DESCRIPITON
1	AM-MPTC-6600NT-6D-TF01	Right rear mud block rubber sheet	12	AM-MPTC-6600NT-6D-TF12	Side fender/left
2	AM-MPTC-6600NT-6D-TF02	Side fender/right	13	AM-MPTC-6600NT-6D-TF13	Type 1 non-metal insert hexagon lock nut
3	AM-MPTC-6600NT-6D-TF03	Narrow fender/right	14	AM-MPTC-6600NT-6D-TF14	Hexagon flange bolts
4	AM-MPTC-6600NT-6D-TF04	Right front mud block rubber sheet	15	AM-MPTC-6600NT-6D-TF15	Left front mud block rubber plate
5	AM-MPTC-6600NT-6D-TF05	Towing body	16	AM-MPTC-6600NT-6D-TF16	Rubber block laminate
6	AM-MPTC-6600NT-6D-TF06	Cotter pin	17	AM-MPTC-6600NT-6D-TF17	Left rear mud block rubber plate
7	AM-MPTC-6600NT-6D-TF07	Pin shaft	18	AM-MPTC-6600NT-6D-TF18	Narrow fender/left
8	AM-MPTC-6600NT-6D-TF08	Hexagon flange bolts		AM-MPTC-6600NT-6D-TF19	Sliding baffle
9	AM-MPTC-6600NT-6D-TF09	Lock the small handle			
10	AM-MPTC-6600NT-6D-TF10	Hinge B			
11	AM-MPTC-6600NT-6D-TF11	Hinge A			

Trailer body parts - TG

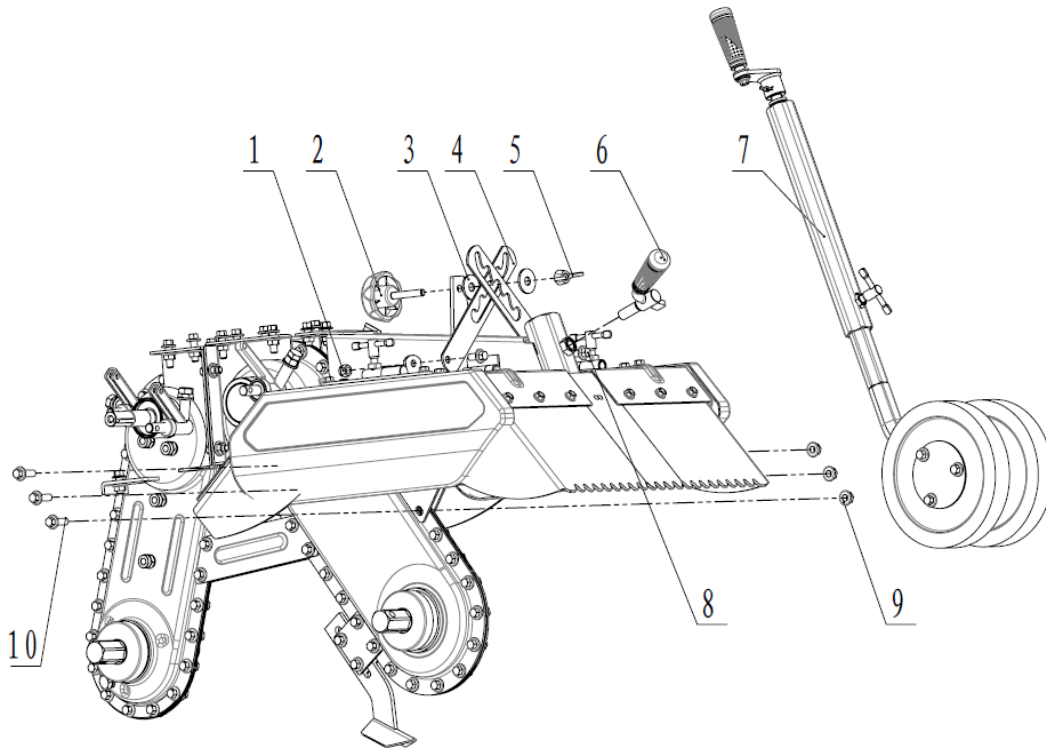


SL NO	PART NO	DESCRIPITON
1	AM-MPTC-6600NT-6D-TG01	HexagonLock Nut
2	AM-MPTC-6600NT-6D-TG02	The adjusting block locks the handle
3	AM-MPTC-6600NT-6D-TG03	Large washer
4	AM-MPTC-6600NT-6D-TG04	Fender Angle adjustment block
5	AM-MPTC-6600NT-6D-TG05	Butterfly nut
6	AM-MPTC-6600NT-6D-TG06	Resistance plow knife locking handle/arc model
7	AM-MPTC-6600NT-6D-TG07	Depth roller
8	AM-MPTC-6600NT-6D-TG08	Hexagonal flange bolt
9	AM-MPTC-6600NT-6D-TG09	Hexagon flange nut
10	AM-MPTC-6600NT-6D-TG10	Hexagonal flange bolt

Power, armrest base parts - TH

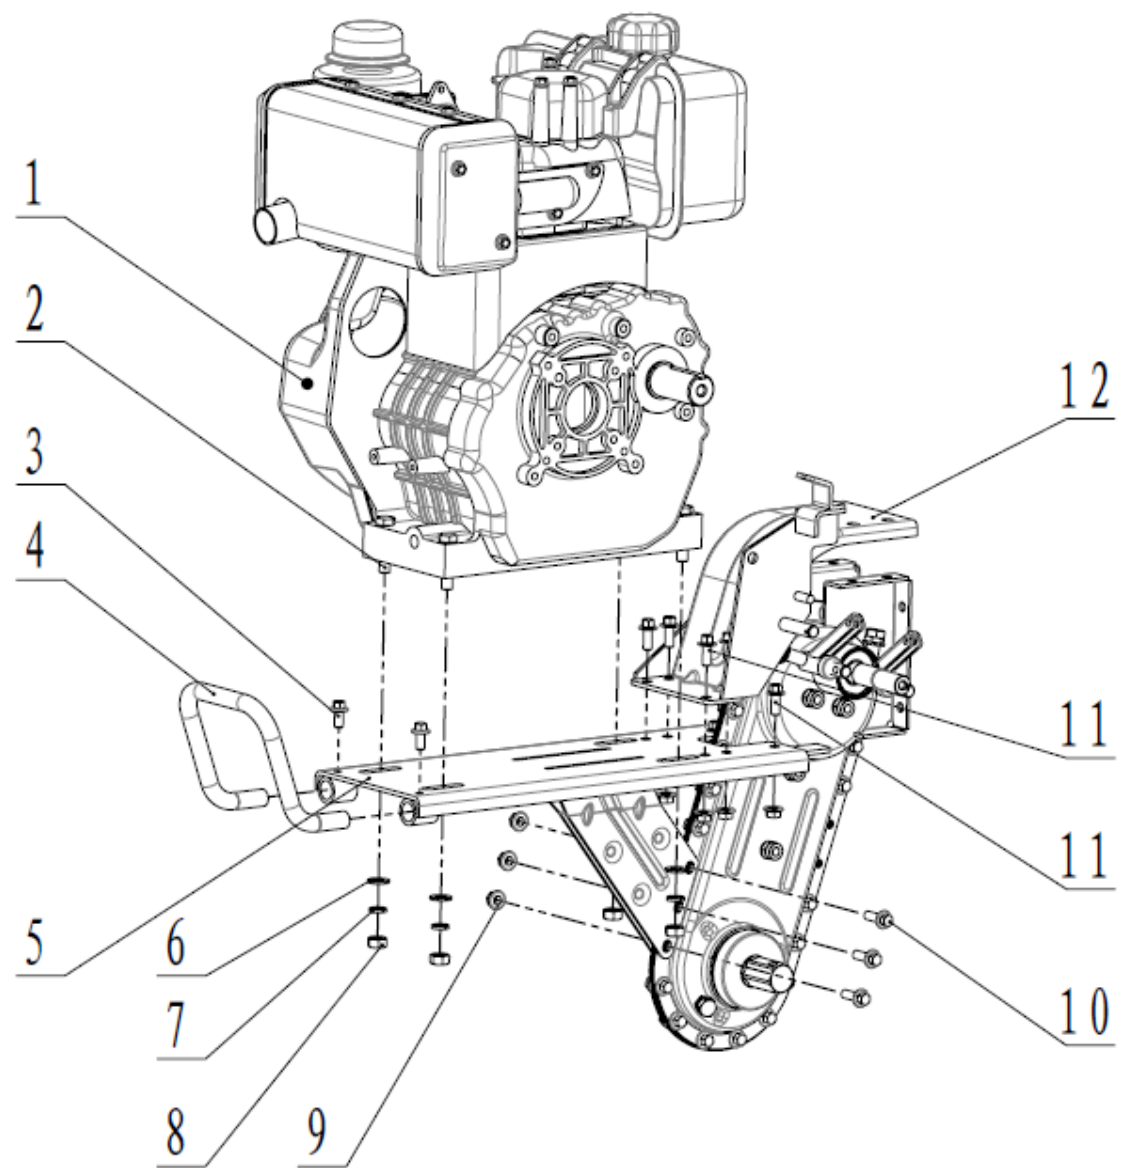


SL NO	PART NO	DESCRIPITON	SL NO	PART NO	DESCRIPITON
1	AM-MPTC-6600NT-6D-TH01	Engine - AM-178			
2	AM-MPTC-6600NT-6D-TH02	Hexagon head bolt			
3	AM-MPTC-6600NT-6D-TH03	Hexagonal flange bolt			
4	AM-MPTC-6600NT-6D-TH04	Machine handle			
5	AM-MPTC-6600NT-6D-TH05	Engine support			
6	AM-MPTC-6600NT-6D-TH06	Flat washer			
7	AM-MPTC-6600NT-6D-TH07	Standard spring washer			
8	AM-MPTC-6600NT-6D-TH08	Hexagon nut			
9	AM-MPTC-6600NT-6D-TH09	Hexagon flange nut			
10	AM-MPTC-6600NT-6D-TH10	Hexagonal flange bolt			
11	AM-MPTC-6600NT-6D-TH11	Hexagon flange bolt			
12	AM-MPTC-6600NT-6D-TH12	Armrest base			

Handle and tensioner parts - TJ

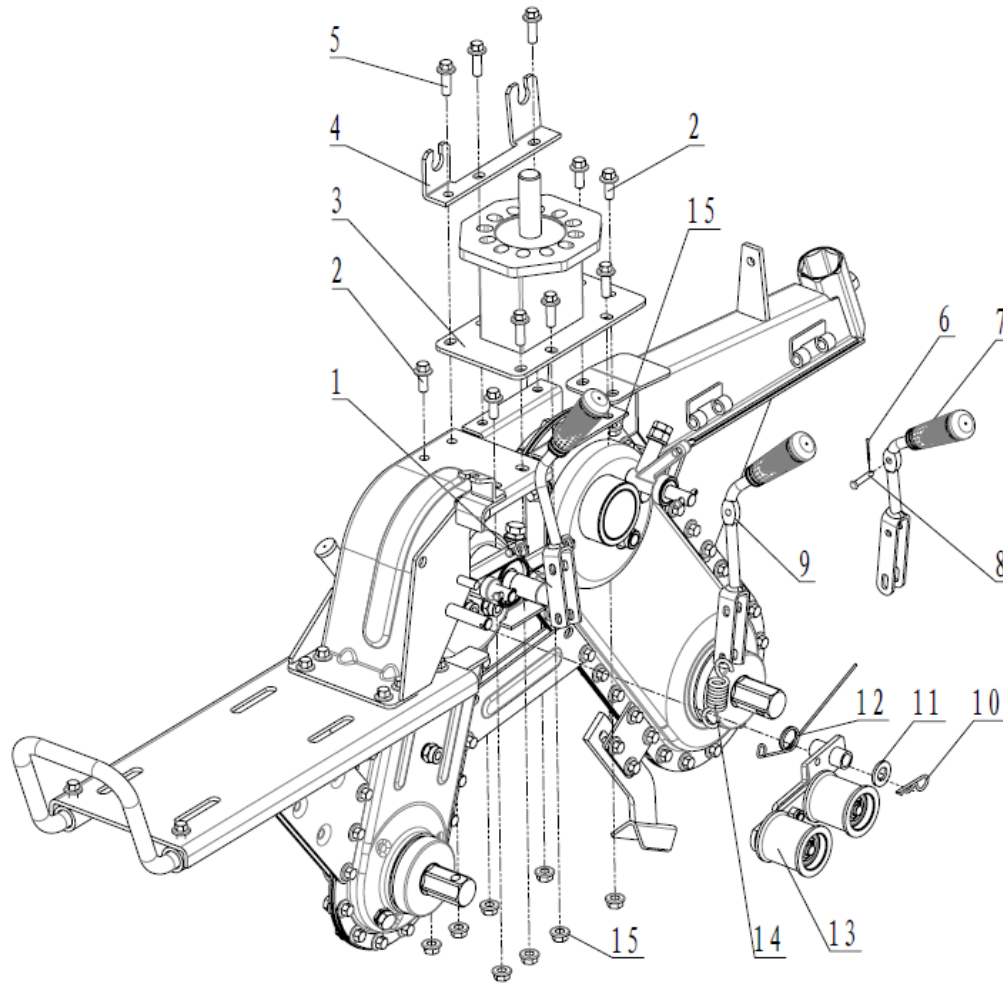


SL NO	PART NO	DESCRIPITON
1	AM-MPTC-6600NT-6D-TJ01	Shift handle/arc model
2	AM-MPTC-6600NT-6D-TJ02	Hexagon flange bolt
3	AM-MPTC-6600NT-6D-TJ03	Armrest bracket
4	AM-MPTC-6600NT-6D-TJ04	Cable support
5	AM-MPTC-6600NT-6D-TJ05	Hexagonal flange bolt
6	AM-MPTC-6600NT-6D-TJ06	Cotter pin
7	AM-MPTC-6600NT-6D-TJ07	Shift handle/tiller box/Arc model
8	AM-MPTC-6600NT-6D-TJ08	Pin shaft
9	AM-MPTC-6600NT-6D-TJ09	Extended flexible shaft shift handle
10	AM-MPTC-6600NT-6D-TJ10	Circlip B
11	AM-MPTC-6600NT-6D-TJ11	Flat washer
12	AM-MPTC-6600NT-6D-TJ12	Tensioning cyclic torsion spring
13	AM-MPTC-6600NT-6D-TJ13	Double tension wheel assembly
14	AM-MPTC-6600NT-6D-TJ14	Tension wheel spring
15	AM-MPTC-6600NT-6D-TJ15	Hexagon flange nut

Pulleys and belt guard parts - Tk

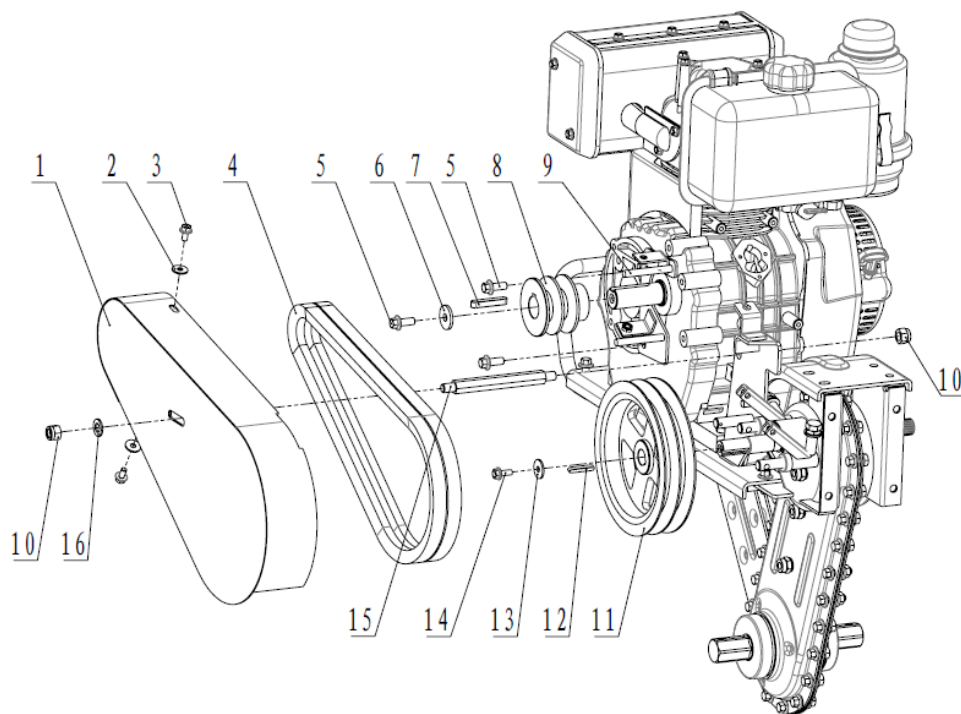


SL NO	PART NO	DESCRIPITON
1	AM-MPTC-6600NT-6D-TK01	Belt guard
2	AM-MPTC-6600NT-6D-TK02	Large washer
3	AM-MPTC-6600NT-6D-TK03	Hexagon flange bolts
4	AM-MPTC-6600NT-6D-TK04	Agricultural machine V-belt
5	AM-MPTC-6600NT-6D-TK05	Hexagon flange bolt
6	AM-MPTC-6600NT-6D-TK06	Extra large washer
7	AM-MPTC-6600NT-6D-TK07	Flat key
8	AM-MPTC-6600NT-6D-TK08	Driving pulley
9	AM-MPTC-6600NT-6D-TK09	Driving pulley base plate
10	AM-MPTC-6600NT-6D-TK10	Hexagon Lock Nut
11	AM-MPTC-6600NT-6D-TK11	Driven pulley
12	AM-MPTC-6600NT-6D-TK12	Flat key
13	AM-MPTC-6600NT-6D-TK13	Extra large washer
14	AM-MPTC-6600NT-6D-TK14	Hexagon flange bolts
15	AM-MPTC-6600NT-6D-TK15	Belt guard support rod
16	AM-MPTC-6600NT-6D-TK16	Flat washer

Adjustable rear wheel assembly - TL

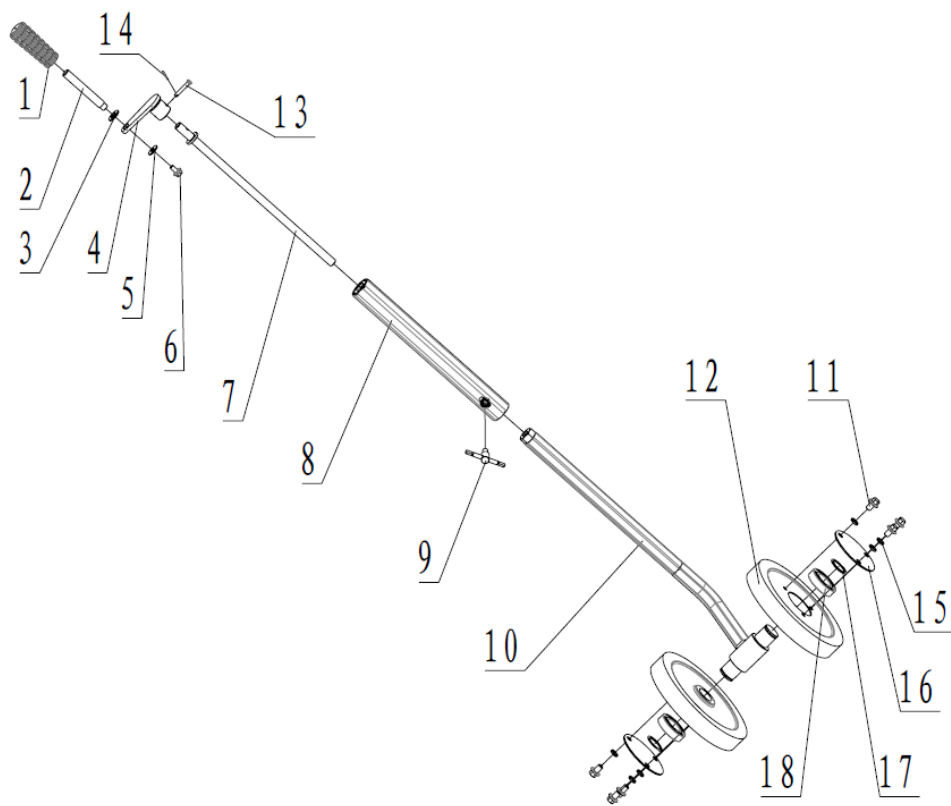


SL NO	PART NO	DESCRIPITON
1	AM-MPTC-6600NT-6D-TL01	Damping grip
2	AM-MPTC-6600NT-6D-TL02	Adjusting handle connecting rod
3	AM-MPTC-6600NT-6D-TL03	Flat washer
4	AM-MPTC-6600NT-6D-TL04	Adjusting handle connection block
5	AM-MPTC-6600NT-6D-TL05	Large washer
6	AM-MPTC-6600NT-6D-TL06	Hexagon flange bolts
7	AM-MPTC-6600NT-6D-TL07	Adjusting screw
8	AM-MPTC-6600NT-6D-TL08	Extended rear wheel connection rod
9	AM-MPTC-6600NT-6D-TL09	Lock the small handle
10	AM-MPTC-6600NT-6D-TL10	Counterweight wheel support rod/bearing
11	AM-MPTC-6600NT-6D-TL11	Hexagonal flange bolt
12	AM-MPTC-6600NT-6D-TL12	Narrow counterweight wheel/bearing
13	AM-MPTC-6600NT-6D-TL13	Pin
14	AM-MPTC-6600NT-6D-TL14	Circlip A
15	AM-MPTC-6600NT-6D-TL15	Standard spring washer
16	AM-MPTC-6600NT-6D-TL16	Cover plate
17	AM-MPTC-6600NT-6D-TL17	Shaft with elastic retainer
18	AM-MPTC-6600NT-6D-TL18	Deep groove ball bearing

Ditching blade Assy - TM

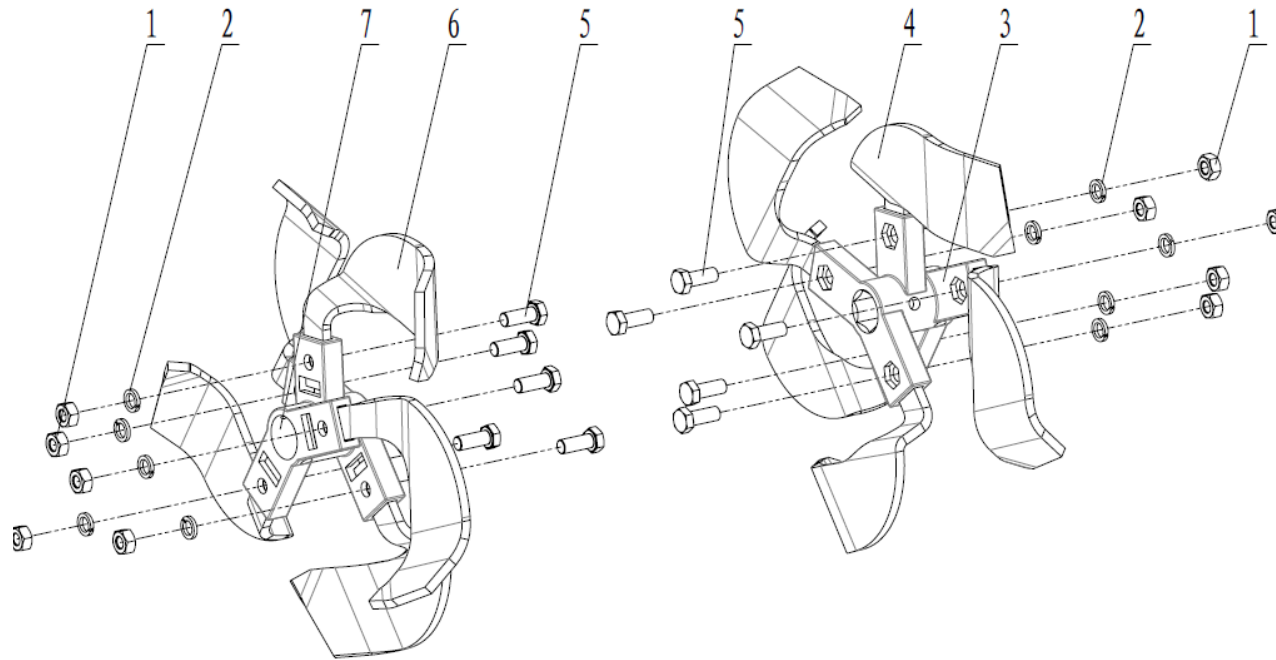


SL NO	PART NO	DESCRIPITON	SL NO	PART NO	DESCRIPITON
1	AM-MPTC-6600NT-6D-TM01	Type 1 hexagon nut	5	AM-MPTC-6600NT-6D-TM05	Hexagon head bolt
2	AM-MPTC-6600NT-6D-TM02	Standard spring washer	6	AM-MPTC-6600NT-6D-TM06	Bowl grooving blade right
3	AM-MPTC-6600NT-6D-TM03	Wrong five grooving tool barrel/left	7	AM-MPTC-6600NT-6D-TM07	Wrong five grooving tool barrel/right
4	AM-MPTC-6600NT-6D-TM04	Bowl grooving blade left			

Trenching Blades - TN

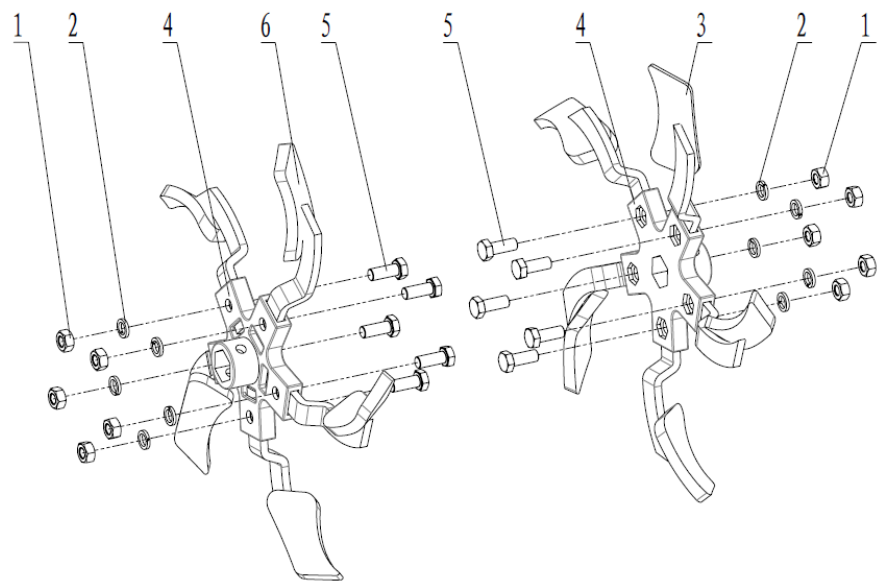

SL NO	PART NO	DESCRIPITON
1	AM-MPTC-6600NT-6D-TN01	Type 1 hexagon nut
2	AM-MPTC-6600NT-6D-TN02	Standard spring washer
3	AM-MPTC-6600NT-6D-TN03	Hard ditch blade left
4	AM-MPTC-6600NT-6D-TN04	Flat five grooving tool barrel
5	AM-MPTC-6600NT-6D-TN05	Hexagon head bolt
6	AM-MPTC-6600NT-6D-TN06	Hard ditch blade right

Rotary blade assembly - TP

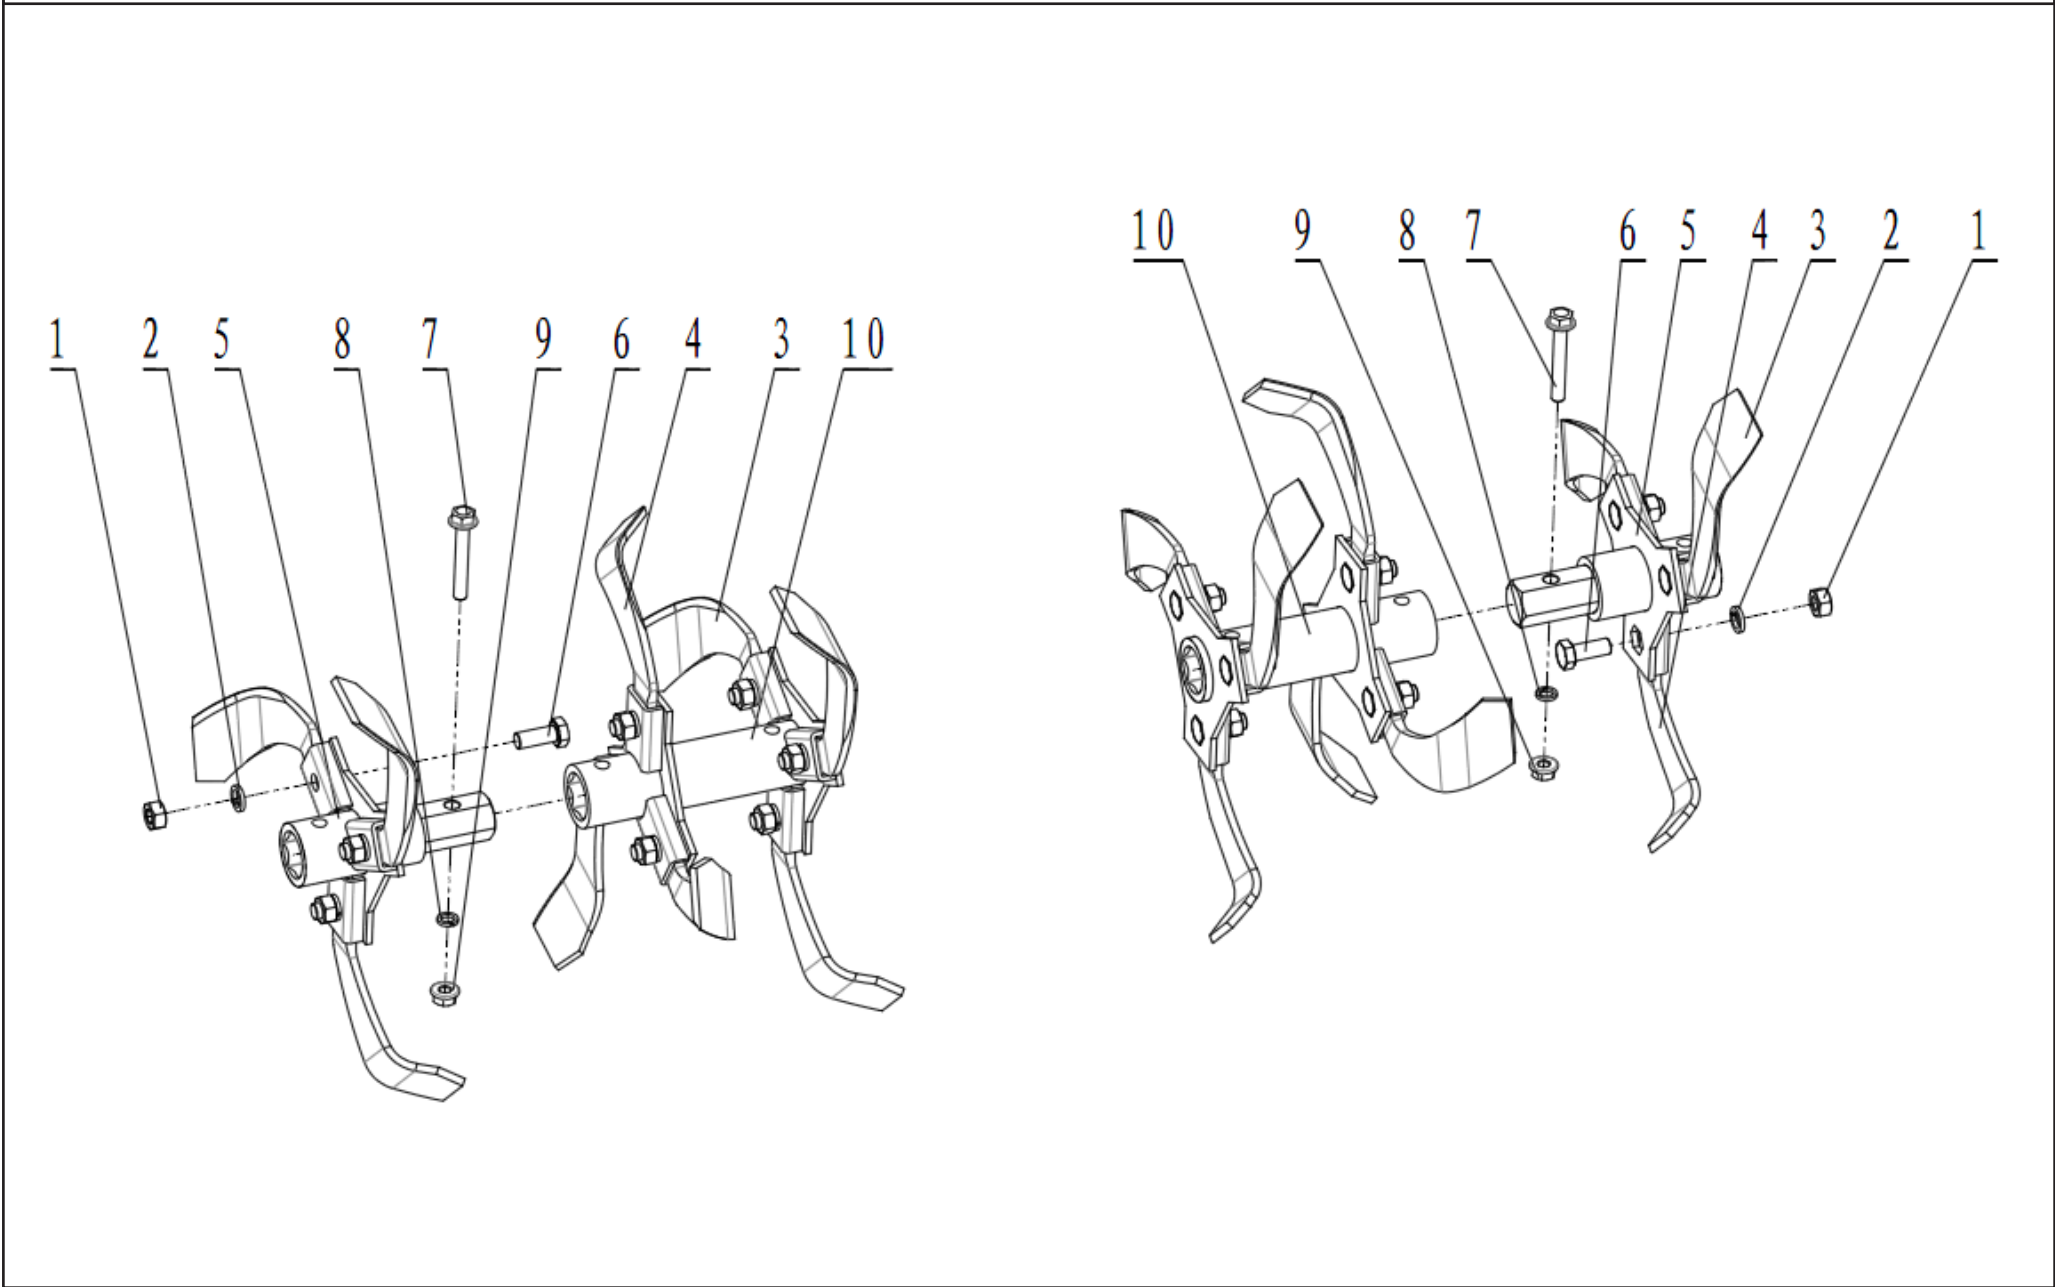

SL NO	PART NO	DESCRIPITON	SL NO	PART NO	DESCRIPITON
1	AM-MPTC-6600NT-6D-TP01	Type 1 hexagon nut			
2	AM-MPTC-6600NT-6D-TP02	Standard spring washer			
3	AM-MPTC-6600NT-6D-TP03	Rotary tiller blade left			
4	AM-MPTC-6600NT-6D-TP04	Rotary plow blade right			
5	AM-MPTC-6600NT-6D-TP05	2+1 tool barrel			
6	AM-MPTC-6600NT-6D-TP06	Hexagon head bolt			
7	AM-MPTC-6600NT-6D-TP07	Hexagon flange bolt			
8	AM-MPTC-6600NT-6D-TP08	Standard spring washer			
9	AM-MPTC-6600NT-6D-TP09	Hexagon flange nut			
10	AM-MPTC-6600NT-6D-TP10	2+1 main tool barrel			

WARRANTY CARD

CUSTOMER COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____ _____	CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
I/Will accept the terms and conditions of warranty as in the warranty card			

DEALERS COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____ _____	CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
I/Will accept the terms and conditions of warranty as in the warranty card			

COMPANY COPY

DATE _____	DATE OF DELIVERY _____	DEALERS OFFICIAL SEAL	DEALERS SIGN _____
PURCHASERS NAME & ADDRESS _____ _____ _____	CUSTOMER SIGN		
PRODUCT NAME	PRODUCT SERIAL NO.	INVOICE/DN NO.	
I/Will accept the terms and conditions of warranty as in the warranty card			

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser

WARRANTY null & void if
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if
(i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc, (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
6. Loss of any nature due to operation or non-operation is not covered under warranty.
7. All free service are at Dealer's service point only.
8. Warranty ceases if service is not done periodically.
9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
12. All disputes are subject to Bangalore Courts Jurisdiction

**FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)**

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
3. Check , clean and adjust the spark plug
5. Check and sparken the cutting tools
7. Start and check the noise, vibration, loosen etc..

2. check and clean the air filter
4. Check and adjust the carburetor tuning
6. Product familiarisation on usage
8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
3. Check , clean and adjust the spark plug
5. Check and sparken the cutting tools
7. Start and check the noise, vibration, loosen etc..

2. check and clean the air filter
4. Check and adjust the carburetor tuning
6. Product familiarisation on usage
8. Routine maintenance and shortage.

FREE SERVICE COUPON (30DAYS/30HRS. WHICHEVER IS EARLIER)

MODEL

SERIAL NUMBER

PDI DATE

SERVICE NO.

PURCHASE BILL NO.

DATE

DEALERS OFFICE SEAL

OPERATIONS

1. Check and test the fuel mixture
3. Check , clean and adjust the spark plug
5. Check and sparken the cutting tools
7. Start and check the noise, vibration, loosen etc..

2. check and clean the air filter
4. Check and adjust the carburetor tuning
6. Product familiarisation on usage
8. Routine maintenance and shortage.

DOS & DONTs

attempting to use the equipments.

1. Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before

trousers and jackets while operating potentially dangerous machines
2. It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes,
3. Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments
4. Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
5. Always keep the equipments in good working condition to minimize loss of output as well as to reduce the pollution and save the environment
6. Do not use the machine within range of persons unless they wear protective clothing
7. Do not operate the machine when fatigued or under the influence of alcohol or drugs
8. For more query kindly contact for our Service Center/Dealer/ franchise

NO. 1 CHOICE OF FARMERS SINCE 1999



Marketed by.
**ratnagiri
impex**
BRINGING YOU THE FUTURE... NOW

RATNAGIRI IMPEX PVT., LTD.,

Annapurna House, #1 / 1G, 7th Cross, New
Guddadahalli

Mysore Road, Bangalore - 560 026

Missed Call : 7393 938 938

Email: ask@agrimart.in