

# **USER MANUAL**



**Professional Fogger** 

Note: Please read the following instructions before use. This book contains important information on SAFETY, ASSEMBLY, OPERATION & DISCLAIMER: DUE TO CONSTANT UPGRADATION, FEATURES AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

# **1. SAFETY PRECAUTIONS**

1) Always wear protective clothing when using the machine. (mask, gloves, long sleeves and etc.)

- 2) Do not use this machine in enclosed room or the places where foods or inflammables exist.
- 3) Do not spray directly to people or animals.
- 4) Do not use this machine in strong wind weather.
- 5) Be careful of burning accident by the shield of the burner.

6) Wait until the machine cools down before refill of chemicals or diesel/water or change of butane gas.

7) After work, wait until the machine cools down completely and then store it in a dry, cool place out of reach of children.

## Warning signs


Read the manual	P	Use a mask
Wear protective clothing		Use gloves
Wash after work	- condumbar.	Caution! Risk of burning
Safety warnings		Caution! Risk of fire



## **ATTENTIONS**

- This product has separated chemical tank and water/diesel tank. Do not put other materials into water tank except water, diesel and dispersing agent. Agricultural chemicals, pesticides and disinfectants should be put into the chemical tank. The coil would be clogged if chemicals are mixed in the water tank according to the usual method.
- 2) When mixing the chemical in the chemical tank, please read the instructions about the mixing ratio of the chemical on the chemical container. Overuse of chemicals may cause dizziness, headache and vomiting.
- Chemicals must be in liquid form.
   (Powder or solid chemicals are not allowed to use)
- 4) After work, continue to push the pump handle at least 5 times to spray out the undiluted chemical before disassemble the water tank.
- 5) Please be sure of ventilation when working in confined spaces.
- 6) Inhalation of combusted gas from the combustion section might cause dizziness, headache and vomiting, so please keep away from the combustion section in the protection shield during work.
- 7) Excess concentration of chemicals might kill plants. Proper mixture proportion must be complied with.
- 8) Spray to plant or object away from about 1.5 meters.

# **3. PART NAMES**

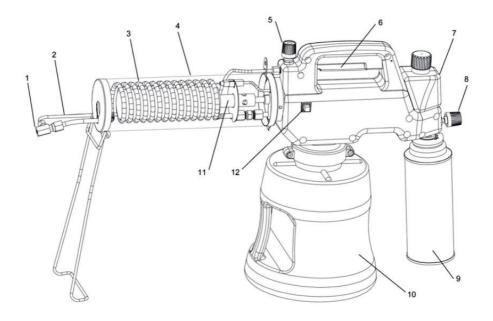

- 1. Nozzle
- 2. Chemical pipe
- 3. Coil
- 4. Protection shield
- 5. Chemical control knob
- 6. Pump handle
- 7. Chemical tank
- 8. Gas control knob
- 9. Gas container
- 10. Water tank
- 11. Burner
- 12. Ignition switch



# **4. OPERATION DIRECTIONS**

#### WATER TANK

- Put diesel or water or water + dispersing agent into water tank.
   Put diesel for fogging, and put water or water + dispersing agent for misting.
- Except diesel, water and dispersing agent, do not put other liquids into water tank.

Other liquids like chemicals should be put into the chemical tank. Chemical tank is installed in the upper case of the machine.

Suggested working ways.
 Outdoor Fog - water tank (diesel)

- chemical tank (diesel + chemicals) Indoor: Mist - water tank (water)

- chemical tank (water + chemicals)

Semi-fog - water tank (water + dispersing agent) chemical tank (water + dispersing

agent + chemicals)

#### CHEMICAL TANK

- 1) Make sure the chemical control valve is closed.
- Put the mixture of chemicals and diesel (water) into the chemical tank. Please keep in mind that the mixing ratio of each chemical must comply with the instruction stated on the chemical container.
- Check the liquid volume according to the marks on the chemical tank. Maximum





capacity of chemical tank is 350ml. Please do not overfill.

- 4) Close the lid of the chemical tank.
  - Overuse of chemicals may cause dizziness, headache, nausea and vomiting.
  - Do not put water into the chemical tank if there is an object which is apt to rust in work place. Recommendation: water tank - water chemical tank - diesel + chemicals.

#### IGNITION

- 1) Make sure the gas control valve is closed initially.
- 2) Assemble the butane gas container.
- 3) Put the machine on an even place where without inflammables.
- Open the gas control valve by turning the knob counterclockwise to supply gas. Push the ignition switch to start the machine.
  - Wind may cause malfunction of ignition, so try to ignite in a place of no wind.
  - In case, the machine could not be activated after pushing of 5 or 6 times, turn off the gas control valve and wait about 20 seconds and then repeat the above procedures.
- After ignition, let the machine preheat 10 seconds for misting, or preheat 40~60 seconds for fogging.





#### SPRAYING APPLICATION

 After preheating, open the chemical control valve by turning the knob counterclockwise, repeat pushing and releasing the pump handle to start spray (misting or fogging).

Spray to the plant or object away from about 1-2 meters.

- \* When used as misting, open the gas valve more if the particle size is large, or close it a little if the particle size is small.
- \* When used as fogging, it is difficult to check the discharged particles with eyes, so please check the level of liquid in the chemical tank.
- The discharge volume of chemical can be controlled by turning the chemical control knob.
- 3) The frequency of pumping action is 1 time in every 3-4 seconds.

If fire is sprayed out, stop pumping immediately and close the gas valve. Put the machine on an even place and wait the fire stops.

- \* for your safety, be care of keeping away from the discharged fog or mist. Do not spray against the wind.
- \* keep a distance from the shield of the burner to avoid burning your skin or clothes.
- After ignition of the machine, do not leave it aside without operation.
- \* If need refill of chemical or water/diesel, stop the machine and wait until it cools down.



#### STOP WORK

- Stop pumping of the handle. After the spray stopped completely, turn off the gas control valve (clockwise).
- 2) Turn off the chemical control valve (clockwise) completely.
- Repeat pushing the pump handle at least 5 times to spray out the undiluted chemical while the coil cools down.
- Remove the gas container from the machine and put it in a cool place with ventilation.
  - \* For long term storage, wash the water tank and chemical tank and put clean diesel into both tanks and assemble the machine well. Then store it in a dry and cool location with ventilation and out of reach of children.

#### SHOULDER STRAP

Attach and use the shoulder strap to carry the machine during work if needed.







# **5.SPECIFICATION**

Name	Mini Mist Fogger	
Model	GP 3TFF	
Dimension (L x W x H)	630x190x365mm	
Net weight	2.0Kg	
Fuel	Liquid butane gas	
Fuel consumption	1EA / 30min	
Starting method	Press the ignition switch	
Ignition system	Piezoelectric ceramic ignitor	
Water tank	Fog	Diesel
(Capacity 2.0L)	Mist	Water
	Semi fog	Water + dispersing agent
Chemical tank	Fog	Diesel + chemical
(Capacity 350cc) Mis	Mist	Water + chemical
	Semi fog	Water + dispersing agent + chemical
Water/Diesel output	2 Liter / hr	
Chemical output	1~1.5 Liter / hr	

# 6. ADVANTAGES OF THIS NEW TYPE FOGGING MACHINE

- 1) This machine has separated spray coil and chemical pipe. There is no carbonization of chemicals and so it does not have problem of clogging in the coil.
- 2) It is not necessary to keep the water tank and equipment separately to prevent corrosion of the pump, because it has separated chemical tank and water tank.
- 3) Chemical utilization is maximized because the chemical goes to the discharge nozzle directly without vaporizing by heat.
- 4) The machine has versatile uses. Since there is no chemical change by heating, it can spray more kinds of chemicals and as well as water.
- 5) The user can secure good sight of the misting by water and is safe.

#### 1st Free Service Coupon

ISO 9001-2015	
CERTIFIED COMPANY	



		E COUPON (30 Da	ys / 20 hrs (Which	ever is earlier)			
	GP-3TFF MINI MIS	TEOGGER	Serial Number			NO	
	PDI Date	TTOGGER				dno	
						WARRANTY AND FREE SERVICE COUPON	
	Service No.		L			WIC .	
						SEI	
	Purchase bill no.	Date					
						D	
	Dealer's Office Seal & Signati	ure				AN	
						LN.	
			Customa	r Signatura		RRA	
	Conditions: Operations listed have be	een performed to my entire		r Signature bour charges. Only consumables wei		WA	
	Bunga	alow   Hotels   G	ardens   Stadium	Resorts   Lawns   Pa	rks   Golf Cour	se	-
							>€
		2nd Free	Service Coup	on	ISO 9001-2015		
				CERTIF	IED COMPANY		
		E COUPON (30 Da	ys / 20 hrs (Which	ever is earlier)			
	GP-3TFF MINI MIS	T FOGGER	Serial Number			NO	
	PDI Date					OUP	
						5	
	Service No.					3VI C	
						SE	
	Purchase bill no.	Date					
						ND F	
	Dealer's Office Seal & Signati	ure				WARRANTY AND FREE SERVICE COUPON	
						ANT	
			Custome	r Signature		\RR/	
	Conditions: Operations listed have be	een performed to my entire				7M	
	Bunga	alow   Hotels   G	ardens   Stadium	Resorts   Lawns   Pa	rks   Golf Cour	se	
							>⊱
							~>
		3rd Free S	Service Coup		ISO 9001-2015		
			ys / 20 hrs (Which		IED COMPANY		
	Model		Serial Number	ever is earlier,		_	
	GP-3TFF MINI MIS	T FOGGER				PON	
	PDI Date					000	
						B	
	Service No.					ERV	
	Demokra skiller	Data				ES	
	Purchase bill no.	Date				Æ	
	Dealer's Office Seal & Signati	ure				<b>UND</b>	
	5					TYA	
						3AN	
				r Signature		WARRANTY AND FREE SERVICE COUPON	
递	Conditions: Operations listed have be	een performed to my entire	satisfaction without any la	bour charges. Only consumables we	re charged.	3	W/
	Bunga	alow   Hotels   G	ardens   Stadium	Resorts   Lawns   Pa	rks   Golf Cour	se	MARCH A L
			A MARY STREET, MARKET				-

LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED
WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective
material / poor workmaship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under
warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase
document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

#### WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc., (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction
- 1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc., (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction
- 1. LIMITED WARRANTY PERIOD : For a period of six months from the date of Sale / delivery of the product which ever is earlier. 2. LIMITED WARRANTY OBLIGATION : Replacement of defective part(s) by authorized dealer are free of charges. If found defective by reasons of defective material / poor workmanship, parts will be replaced and there will be no value re-imbursement. 3. TERMS & CONDITIONS : a. Claims under warranty will be accepted on submission of Warranty Card duly filled and stamped by authorized dealer together with the original purchase document. : b. Shipping / transportation / Incidental charges incurred in replacing defective parts under warranty shall be borne by the purchaser.

#### WARRANTY null & void if

- (i) Lack of maintenance, (ii) Incorrect use of the machine or tampering, (iii) Use of non-genuine spare parts, (iv) Usage of acids, solvents, or any flammable materials, (v) Non-usage of filter water / clear water / soft water & using water above 40°C temperature, (vi) While using the pressure washers to draw water which is contaminated with dust & solvents (eg. paint thinners, gasoline, oil, etc.), (vii) Repair done by unauthorized service people, (viii) Those parts subject to wear & tear due to normal operations and plastic parts, rubber items etc., (ix) Loose connections, faulty electrical fixtures & fluctuations in power supply.
- 4. Should any failure occur during or after the warranty period, customer does not have the right to interrupt payment / price discount.
- 5. Incidental or consequential damages like inconvenience commercial loss, loss of tie, mental agony etc.
- 6. Loss of any nature due to operation or non-operation is not covered under warranty.
- 7. All free service are at Dealer's service point only.
- 8. Warranty ceases if service is not done periodically.
- 9. The attached card should be completed and returned to Ratnagiri Impex Pvt. Ltd. for registration immediately after sale / delivery.
- 10. The warranty is void unless you register the warranty card with Ratnagiri Impex Pvt. Ltd.
- 11. The decision of Ratnagiri Impex Pvt. Ltd., in settling the warranty is final in all respects.
- 12. All disputes are subject to Bangalore Courts Jurisdiction

Purchaser's Name & Address	
	Date of Delivery
Product Name	Dealer's Office Seal
GP-3TFF MINI MIST FOGGER	
Product Serial No.	
	Dealer Sign
	Customer Sign.
Invoice / DN No.	I/We accept the terms and conditions of Warrant
	as in the Warranty Card.
Warranty Card	DEALER'S COPY
Purchaser's Name & Address	
	Date of Delivery
	Dealer's Office Seal
Product Name	
GP-3TFF MINI MIST FOGGER	
Product Serial No.	
	Dealer Sign
	Customer Sign.
Invoice / DN No.	I/We accept the terms and conditions of Warrant as in the Warranty Card.
Warranty Card	COMPANY COPY
Purchaser's Name & Address	Date of Delivery
	Dealer's Office Seal
Product Name  GP-3TFF MINI MIST FOGGER	
Product Serial No.	
	Dealar Sim
	Dealer Sign
Invoice / DN No.	Customer Sign
	I/We accept the terms and conditions of Warrant as in the Warranty Card.









# Do's Don'ts

- Always read the instruction manual supplied along with the equipments and understand the correct installation and operating procedures before attempting to use the equipments.
- It is important to use the personal protection equipments such as head helmet with visor, ear defenders, goggles, safety gloves, cut resistant shoes, trousers and jackets while operating potentially dangerous machines.
- Avoid untrained persons using the equipments. Children must not be allowed to handle these equipments.
- Always use genuine spares and accessories in repairs and usage to derive maximum life of the equipments.
- Always keep the equipments in good working condition to minimise loss of output as well as to reduce the pollution and save the environment.
- Do not use the machine within range of persons unless they wear protective clothing.
- Do not operate the machine when fatigued or under the influence of alcohol or drugs.
- For more query kindly contact for our Service Center/Dealer/ franchise





IMPORTERS & DISTRIBUTORS **RATNAGIRI IMPEX PVT LTD** Annapurna House, #1/1G, 7th Cross, New Guddadahalli

Mysore Road, Bangalore-560 026 Customer Care: 1800-425-3036 email: info@ratnagiriimpex.com www.ratnagiriimpex.com



AN ISO 9001:2015 CERTIFIED COMPANY